



USER GUIDE

SMCGS24C-Smart

**EZ Switch™ 10/100/1000
24-Port Smart Switch**



EZ Switch 10/100/1000 User Guide

From SMC's EZ line of cost-effective workgroup LAN solutions

SMC[®]

N e t w o r k s

20 Mason

Irvine, CA 92618

Phone: (949) 679-8000

March 2008
Pub. # 149100009500H
E032008-AP-R04

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2008 by

SMC Networks, Inc.

20 Mason

Irvine, CA 92618

All rights reserved. Printed in Taiwan

Trademarks:

SMC is a registered trademark; and EZ Switch, TigerStack and TigerSwitch are trademarks of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

LIMITED WARRANTY

Limited Warranty Statement: SMC Networks, Inc. (“SMC”) warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term. All SMC products carry a standard 90-day limited warranty from the date of purchase from SMC or its Authorized Reseller. SMC may, at its own discretion, repair or replace any product not operating as warranted with a similar or functionally equivalent product, during the applicable warranty term. SMC will endeavor to repair or replace any product returned under warranty within 30 days of receipt of the product.

The standard limited warranty can be upgraded to a Limited Lifetime* warranty by registering new products within 30 days of purchase from SMC or its Authorized Reseller. Registration can be accomplished via the enclosed product registration card or online via the SMC web site. Failure to register will not affect the standard limited warranty. The Limited Lifetime warranty covers a product during the Life of that Product, which is defined as the period of time during which the product is an “Active” SMC product. A product is considered to be “Active” while it is listed on the current SMC price list. As new technologies emerge, older technologies become obsolete and SMC will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and is no longer an “Active” SMC product. A list of discontinued products with their respective dates of discontinuance can be found at:

http://www.smc.com/index.cfm?action=customer_service_warranty.

All products that are replaced become the property of SMC. Replacement products may be either new or reconditioned. Any replaced or repaired product carries either a 30-day limited warranty or the remainder of the initial warranty, whichever is longer. SMC is not responsible for any custom software or firmware, configuration information, or memory data of Customer contained in, stored on, or integrated with any products returned to SMC pursuant to any warranty. Products returned to SMC should have any customer-installed accessory or add-on components, such as expansion modules, removed prior to returning the product for replacement. SMC is not responsible for these items if they are returned with the product.

Customers must contact SMC for a Return Material Authorization number prior to returning any product to SMC. Proof of purchase may be required. Any product returned to SMC without a valid Return Material Authorization (RMA) number clearly marked on the outside of the package will be returned to customer at customer's expense. For warranty claims within North America, please call our toll-free customer support number at (800) 762-4968. Customers are responsible for all shipping charges from their facility to SMC. SMC is responsible for return shipping charges from SMC to customer.

LIMITED WARRANTY

WARRANTIES EXCLUSIVE: IF AN SMC PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT OF THE PRODUCT IN QUESTION, AT SMC'S OPTION. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SMC NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. SMC SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: IN NO EVENT, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), SHALL SMC BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF SMC OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. NOTHING IN THIS WARRANTY SHALL BE TAKEN TO AFFECT YOUR STATUTORY RIGHTS.

* SMC will provide warranty service for one year following discontinuance from the active SMC price list. Under the limited lifetime warranty, internal and external power supplies, fans, and cables are covered by a standard one-year warranty from date of purchase.

SMC Networks, Inc.
20 Mason
Irvine, CA 92618

COMPLIANCES

FCC - Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

You may use unshielded twisted-pair (UTP) for RJ-45 connections - Category 3 or better for 10 Mbps connections, Category 5 or better for 100 Mbps connections, Category 5, 5e, or 6 for 1000 Mbps connections. For fiber optic connections, you may use 50/125 or 62.5/125 micron multimode fiber or 9/125 micron single-mode fiber.

Industry Canada - Class A

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe A prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par le ministère des Communications.

Japan VCCI Class A

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

CE Mark Declaration of Conformance for EMI and Safety (EEC)

SMC contact for these products in Europe is:

SMC Networks Europe,
Edificio Conata II,
Calle Fructuós Gelabert 6-8, 2^a, 4^a,
08970 - Sant Joan Despí, Barcelona, Spain.

This information technology equipment complies with the requirements of the Council Directive 89/336/EEC on the Approximation of the laws of the Member States relating to Electromagnetic Compatibility and 73/23/EEC for electrical equipment used within certain voltage limits and the Amendment Directive 93/68/EEC. For the evaluation of the compliance with these Directives, the following standards were applied:

- RFI Emission:
- Limit class A according to EN 55022:1998
 - Limit class A for harmonic current emission according to EN 61000-3-2/1995
 - Limitation of voltage fluctuation and flicker in low-voltage supply system according to EN 61000-3-3/1995
- Immunity:
- Product family standard according to EN 55024:1998
 - Electrostatic Discharge according to EN 61000-4-2:1995 (Contact Discharge: ± 4 kV, Air Discharge: ± 8 kV)
 - Radio-frequency electromagnetic field according to EN 61000-4-3:1996 (80 - 1000 MHz with 1 kHz AM 80% Modulation: 3 V/m)
 - Electrical fast transient/burst according to EN 61000-4-4:1995 (AC/DC power supply: ± 1 kV, Data/Signal lines: ± 0.5 kV)
 - Surge immunity test according to EN 61000-4-5:1995 (AC/DC Line to Line: ± 1 kV, AC/DC Line to Earth: ± 2 kV)
 - Immunity to conducted disturbances, Induced by radio-frequency fields: EN 61000-4-6:1996 (0.15 - 80 MHz with 1 kHz AM 80% Modulation: 3 V/m)
 - Power frequency magnetic field immunity test according to EN 61000-4-8:1993 (1 A/m at frequency 50 Hz)
 - Voltage dips, short interruptions and voltage variations immunity test according to EN 61000-4-11:1994 (>95% Reduction @10 ms, 30% Reduction @500 ms, >95% Reduction @5000 ms)
- LVD:
- EN 60950-1:2001

Warning: Do not plug a phone jack connector in the RJ-45 port. This may damage this device.

Attention: Les raccordeurs ne sont pas utilisés pour le système téléphonique!

Safety Compliance

Warning: Fiber Optic Port Safety



When using a fiber optic port, never look at the transmit laser while it is powered on. Also, never look directly at the fiber TX port and fiber cable ends when they are powered on.

Avertissement: Ports pour fibres optiques - sécurité sur le plan optique



Ne regardez jamais le laser tant qu'il est sous tension. Ne regardez jamais directement le port TX (Transmission) à fibres optiques et les embouts de câbles à fibres optiques tant qu'ils sont sous tension.

Warnhinweis: Faseroptikanschlüsse - Optische Sicherheit



Niemals ein Übertragungslaser betrachten, während dieses eingeschaltet ist. Niemals direkt auf den Faser-TX-Anschluß und auf die Faserkabelenden schauen, während diese eingeschaltet sind.

Power Cord Safety

Please read the following safety information carefully before installing this switch:

Warning: Installation and removal of the unit must be carried out by qualified personnel only.

- The unit must be connected to an earthed (grounded) outlet to comply with international safety standards.
- Do not connect the unit to an A.C. outlet (power supply) without an earth (ground) connection.
- The appliance coupler (the connector to the unit and not the wall plug) must have a configuration for mating with an EN 60320/IEC 320 appliance inlet.
- The socket outlet must be near to the unit and easily accessible. You can only remove power from the unit by disconnecting the power cord from the outlet.
- This unit operates under SELV (Safety Extra Low Voltage) conditions according to IEC 60950. The conditions are only maintained if the equipment to which it is connected also operates under SELV conditions.

France and Peru only

This unit cannot be powered from IT[†] supplies. If your supplies are of IT type, this unit must be powered by 230 V (2P+T) via an isolation transformer ratio 1:1, with the secondary connection point labelled Neutral, connected directly to earth (ground).

[†] Impédance à la terre

Important! Before making connections, make sure you have the correct cord set. Check it (read the label on the cable) against the following:

Power Cord Set	
U.S.A. and Canada	The cord set must be UL-approved and CSA certified.
	The minimum specifications for the flexible cord are: - No. 18 AWG - not longer than 2 meters, or 16 AWG. - Type SV or SJ - 3-conductor
	The cord set must have a rated current capacity of at least 10 A
	The attachment plug must be an earth-grounding type with NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
Denmark	The supply plug must comply with Section 107-2-D1, Standard DK2-1a or DK2-5a.
Switzerland	The supply plug must comply with SEV/ASE 1011.
U.K.	The supply plug must comply with BS1363 (3-pin 13 A) and be fitted with a 5 A fuse which complies with BS1362.
	The mains cord must be <HAR> or <BASEC> marked and be of type HO3VVF3GO.75 (minimum).
Europe	The supply plug must comply with CEE7/7 ("SCHUKO").
	The mains cord must be <HAR> or <BASEC> marked and be of type HO3VVF3GO.75 (minimum).
	IEC-320 receptacle.

Veillez lire à fond l'information de la sécurité suivante avant d'installer le Switch:

AVERTISSEMENT: L'installation et la dépose de ce groupe doivent être confiés à un personnel qualifié.

- Ne branchez pas votre appareil sur une prise secteur (alimentation électrique) lorsqu'il n'y a pas de connexion de mise à la terre (mise à la masse).
- Vous devez raccorder ce groupe à une sortie mise à la terre (mise à la masse) afin de respecter les normes internationales de sécurité.
- Le coupleur d'appareil (le connecteur du groupe et non pas la prise murale) doit respecter une configuration qui permet un branchement sur une entrée d'appareil EN 60320/IEC 320.
- La prise secteur doit se trouver à proximité de l'appareil et son accès doit être facile. Vous ne pouvez mettre l'appareil hors circuit qu'en débranchant son cordon électrique au niveau de cette prise.
- L'appareil fonctionne à une tension extrêmement basse de sécurité qui est conforme à la norme IEC 60950. Ces conditions ne sont maintenues que si l'équipement auquel il est raccordé fonctionne dans les mêmes conditions.

France et Pérou uniquement:

Ce groupe ne peut pas être alimenté par un dispositif à impédance à la terre. Si vos alimentations sont du type impédance à la terre, ce groupe doit être alimenté par une tension de 230 V (2 P+T) par le biais d'un transformateur d'isolement à rapport 1:1, avec un point secondaire de connexion portant l'appellation Neutre et avec raccordement direct à la terre (masse).

Cordon électrique - Il doit être agréé dans le pays d'utilisation	
Etats-Unis et Canada:	Le cordon doit avoir reçu l'homologation des UL et un certificat de la CSA.
	Les spécifications minimales pour un câble flexible sont AWG No. 18, ou AWG No. 16 pour un câble de longueur inférieure à 2 mètres. - type SV ou SJ - 3 conducteurs
	Le cordon doit être en mesure d'acheminer un courant nominal d'au moins 10 A.
	La prise femelle de branchement doit être du type à mise à la terre (mise à la masse) et respecter la configuration NEMA 5-15P (15 A, 125 V) ou NEMA 6-15P (15 A, 250 V).
Danemark:	La prise mâle d'alimentation doit respecter la section 107-2 D1 de la norme DK2 1a ou DK2 5a.

Cordon électrique - Il doit être agréé dans le pays d'utilisation	
Suisse:	La prise mâle d'alimentation doit respecter la norme SEV/ASE 1011.
Europe	La prise secteur doit être conforme aux normes CEE 7/7 ("SCHUKO") LE cordon secteur doit porter la mention <HAR> ou <BASEC> et doit être de type HO3VVF3GO.75 (minimum).

Bitte unbedingt vor dem Einbauen des Switches die folgenden Sicherheitsanweisungen durchlesen:

WARNING: Die Installation und der Ausbau des Geräts darf nur durch Fachpersonal erfolgen.

- Das Gerät sollte nicht an eine ungeerdete Wechselstromsteckdose angeschlossen werden.
- Das Gerät muß an eine geerdete Steckdose angeschlossen werden, welche die internationalen Sicherheitsnormen erfüllt.
- Der Gerätestecker (der Anschluß an das Gerät, nicht der Wandsteckdosenstecker) muß einen gemäß EN 60320/IEC 320 konfigurierten Geräteeingang haben.
- Die Netzsteckdose muß in der Nähe des Geräts und leicht zugänglich sein. Die Stromversorgung des Geräts kann nur durch Herausziehen des Gerätenetzkabels aus der Netzsteckdose unterbrochen werden.
- Der Betrieb dieses Geräts erfolgt unter den SELV-Bedingungen (Sicherheitskleinstspannung) gemäß IEC 60950. Diese Bedingungen sind nur gegeben, wenn auch die an das Gerät angeschlossenen Geräte unter SELV-Bedingungen betrieben werden.

Stromkabel. Dies muss von dem Land, in dem es benutzt wird geprüft werden:	
Schweiz	Dieser Stromstecker muß die SEV/ASE 1011 Bestimmungen einhalten.
Europe	Das Netzkabel muß vom Typ HO3VVF3GO.75 (Mindestanforderung) sein und die Aufschrift <HAR> oder <BASEC> tragen. Der Netzstecker muß die Norm CEE 7/7 erfüllen ("SCHUKO").

Warnings and Cautionary Messages

- Warning:** This product does not contain any serviceable user parts.
- Warning:** Installation and removal of the unit must be carried out by qualified personnel only.
- Warning:** When connecting this device to a power outlet, connect the field ground lead on the tri-pole power plug to a valid earth ground line to prevent electrical hazards.
- Warning:** This switch uses lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.
- Caution:** Wear an anti-static wrist strap or take other suitable measures to prevent electrostatic discharge when handling this equipment.
- Caution:** Do not plug a phone jack connector in the RJ-45 port. This may damage this device. Les raccordeurs ne sont pas utilisé pour le système téléphonique!
- Caution:** Use only twisted-pair cables with RJ-45 connectors that conform to FCC standards.

Warnings (in German)

- Achtung:** Dieses Produkt enthält keine Teile, die eine Wartung vom Benutzer benötigen.
- Achtung:** Installation und Deinstallation des Gerätes müssen von qualifiziertem Servicepersonal durchgeführt werden.
- Achtung:** Wenn das Gerät an eine Steckdose angeschlossen wird, muß der Masseanschluß am dreipoligen Netzstecker mit Schutzterde verbunden werden, um elektrische Gefahren zu vermeiden.
- Achtung:** Dieses Gerät nutzt Laser zur Signalübertragung über Glasfasern. Die Laser entsprechen den Anforderungen an eine Lasereinrichtung der Klasse 1 und sind durch ihre Bauart im normalen Betrieb sicher für die Augen. Trotzdem sollte niemals direkt in den einen Übertragungskanal geblickt werden, wenn er eingeschaltet ist.

Environmental Statement

The manufacturer of this product endeavours to sustain an environmentally-friendly policy throughout the entire production process. This is achieved through the following means:

- Adherence to national legislation and regulations on environmental production standards.
- Conservation of operational resources.
- Waste reduction and safe disposal of all harmful un-recyclable by-products.
- Recycling of all reusable waste content.
- Design of products to maximize recyclables at the end of the product's life span.
- Continual monitoring of safety standards.

End of Product Life Span

This product is manufactured in such a way as to allow for the recovery and disposal of all included electrical components once the product has reached the end of its life.

Manufacturing Materials

There are no hazardous nor ozone-depleting materials in this product.

Documentation

All printed documentation for this product uses biodegradable paper that originates from sustained and managed forests. The inks used in the printing process are non-toxic.

Purpose

This guide details the hardware features of this switch, including Its physical and performance-related characteristics, and how to install the switch.

Audience

This guide is for system administrators with a working knowledge of network management. You should be familiar with switching and networking concepts.

Zielgruppe Dieser Anleitung ist fuer Systemadministratoren mit Erfahrung im Netzwerkmanagement. Sie sollten mit Switch- und Netzwerkkonzepten vertraut sein.

Related Publications

As part of the switch firmware, there is an online web-based help that describes all management related features.

TABLE OF CONTENTS

1	About the EZ Switch 10/100/1000	1-1
	Overview	1-1
	Switch Architecture	1-2
	Network Management Options	1-2
	Description of Hardware	1-3
	10/100/1000BASE-T Ports	1-3
	SFP Slots	1-3
	Port and Power Status LEDs	1-3
	Power Supply Socket	1-5
	Features and Benefits	1-5
	Connectivity	1-5
	Expandability	1-6
	Performance	1-6
	Management	1-6
2	Network Planning	2-1
	Introduction to Switching	2-1
	Application Examples	2-2
	Collapsed Backbone	2-2
	Central Wiring Closet	2-3
	Remote Connections with Fiber Cable	2-4
	Making VLAN Connections	2-5
	Application Notes	2-6
3	Installing the Switch	3-1
	Selecting a Site	3-1
	Ethernet Cabling	3-2
	Equipment Checklist	3-3
	Package Contents	3-3
	Optional Rack-Mounting Equipment	3-3
	Mounting	3-3
	Rack Mounting	3-4
	Desktop or Shelf Mounting	3-6
	Installing an SFP Transceiver	3-7
	Connecting to a Power Source	3-8

4	Making Network Connections	4-1
	Connecting Network Devices	4-1
	Twisted-Pair Devices	4-1
	Cabling Guidelines	4-1
	Connecting to PCs, Servers, Hubs and Switches	4-2
	Network Wiring Connections	4-3
	Fiber Optic SFP Devices	4-4
	Connectivity Rules	4-6
	1000BASE-T Cable Requirements	4-6
	1000 Mbps Gigabit Ethernet Collision Domain	4-6
	100 Mbps Fast Ethernet Collision Domain	4-7
	10 Mbps Ethernet Collision Domain	4-7
	Cable Labeling and Connection Records	4-8
5	Configuring the Switch	5-1
	Using the Web Interface	5-1
	Navigating the Web Browser Interface	5-2
	Home Page	5-2
	Configuration Options	5-3
	Panel Display	5-3
	Main Menu	5-4
	Web Configuration	5-6
	Displaying Status Overview	5-6
	Showing Port Statistics	5-9
	Displaying System Name	5-12
	Setting the Switch's IP Address	5-13
	Configuring the Logon Password	5-14
	Tools	5-15
	Register Product	5-18
	Static MAC	5-18
	Counter Config	5-19
	Port Configuration	5-20
	Configuring Rate Limits	5-21
	Storm Control	5-23
	Port Mirroring	5-24
	Cable Diagnostic	5-25
	Trunks Membership	5-26

	Trunk Configuration	5-27
	Trunk Rate Limit	5-28
	VLAN Settings	5-29
	QOS Settings	5-32
	Security	5-34
	IGMP Snoop	5-39
A	Troubleshooting	A-1
	Diagnosing Switch Indicators	A-1
	Power and Cooling Problems	A-2
	Installation	A-2
	In-Band Access	A-2
B	Cables	B-1
	Twisted-Pair Cable and Pin Assignments	B-1
	10BASE-T/100BASE-TX Pin Assignments	B-2
	Straight-Through Wiring	B-3
	Crossover Wiring	B-4
	1000BASE-T Pin Assignments	B-5
	Cable Testing for Existing Category 5 Cable	B-5
	Adjusting Existing Category 5 Cabling to Run 1000BASE-T	B-6
	Fiber Standards	B-6
C	Specifications	C-1
	Physical Characteristics	C-1
	Switch Features	C-2
	Management Features	C-2
	Standards	C-3
	Compliances	C-3
	Warranty	C-3
D	Ordering Information	D-1
	Glossary	
	Index	

TABLE OF CONTENTS

TABLES

Table 1-1	Port Status LEDs	1-4
Table 1-2	Power Status LED	1-4
Table 4-1	Maximum 1000BASE-T Gigabit Ethernet Cable Length	4-6
Table 4-2	Maximum 1000BASE-SX Fiber Optic Cable Length	4-6
Table 4-3	Maximum 1000BASE-LX Fiber Optic Cable Length	4-7
Table 4-4	Maximum 1000BASE-ZX Fiber Optic Cable Length	4-7
Table 4-5	Maximum Fast Ethernet Cable Length	4-7
Table 4-6	Maximum Ethernet Cable Length	4-7
Table 5-1	Web Page Configuration Buttons	5-3
Table 5-2	Switch Main Menu	5-4
Table 5-3	Port Statistics	5-9
Table A-1	Troubleshooting Chart	A-1
Table B-1	10/100BASE-TX MDI and MDI-X Port Pinouts	B-2
Table B-2	1000BASE-T MDI and MDI-X Port Pinouts	B-5
Table D-1	EZ Switch 10/100/1000 Products and Accessories	D-1

FIGURES

Figure 1-1	Front Panel	1-1
Figure 1-2	Rear Panel	1-1
Figure 1-3	Port LEDs and Power LED	1-4
Figure 1-4	Power Supply Socket	1-5
Figure 2-1	Collapsed Backbone	2-2
Figure 2-2	Central Wiring Closet	2-3
Figure 2-3	Remote Connections with Fiber Cable	2-4
Figure 2-4	Making VLAN Connections	2-5
Figure 3-1	RJ-45 Connections	3-2
Figure 3-2	Attaching the Brackets	3-5
Figure 3-3	Installing the Switch in a Rack	3-5
Figure 3-4	Attaching the Adhesive Feet	3-6
Figure 3-5	Inserting an SFP Transceiver into a Slot	3-7
Figure 3-6	Power Socket	3-8
Figure 4-1	Making Twisted-Pair Connections	4-2
Figure 4-2	Wiring Closet Connections	4-3
Figure 4-3	Making Connections to SFP Transceivers	4-5
Figure 5-1	Home Page	5-2
Figure 5-2	Front Panel Indicators	5-3
Figure 5-3	Switch Information	5-8
Figure 5-4	Port Statistics	5-12
Figure 5-5	System Name	5-13
Figure 5-6	LAN Settings	5-14
Figure 5-7	Password Settings	5-15
Figure 5-8	Reset to Factory Defaults	5-16
Figure 5-9	Upgrade Firmware	5-16
Figure 5-10	Restart Switch	5-17
Figure 5-11	Restart Switch	5-17
Figure 5-12	Register Product	5-18
Figure 5-13	Static MAC Address Configuration	5-19
Figure 5-14	Counter Configuration	5-20
Figure 5-15	Port Configuration	5-21
Figure 5-16	Rate Limiting	5-22
Figure 5-17	Port Broadcast Control	5-24
Figure 5-18	Port Mirroring	5-25
Figure 5-19	Cable Diagnostics	5-26

Figure 5-20	Trunk Membership	5-27
Figure 5-21	Trunk Configuration	5-28
Figure 5-22	Trunk Rate Limiting	5-29
Figure 5-23	VLAN Settings	5-32
Figure 5-24	QoS Settings	5-34
Figure 5-25	IP Filter Configuration	5-35
Figure 5-26	Port Security	5-37
Figure 5-27	Management Access Filter Configuration	5-38
Figure 5-28	IGMP Snooping Configuration	5-40
Figure 5-29	IGMP Snoop Status	5-41
Figure B-1	RJ-45 Connector Pin Numbers	B-1
Figure B-2	Straight-through Wiring	B-3
Figure B-3	Crossover Wiring	B-4

FIGURES

CHAPTER 1

ABOUT THE

EZ SWITCH 10/100/1000

Overview

SMC's EZ Switch 10/100/1000 SMC624C-Smart is a web managed switch with 24 10/100/1000BASE-T ports, four of which are combination ports* that are shared with four SFP transceiver slots (see Figure 1-1, Ports 21-24).

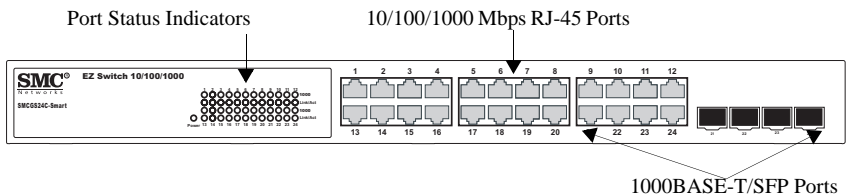


Figure 1-1 Front Panel



Figure 1-2 Rear Panel

* If an SFP transceiver is plugged in, the corresponding RJ-45 port is disabled for ports 21-24.

Switch Architecture

The switch employs a wire-speed, non-blocking switching fabric. This permits simultaneous wire-speed transport of multiple packets at low latency on all ports. The switch also features full-duplex capability on all ports, which effectively doubles the bandwidth of each connection.

The switch uses store-and-forward switching to ensure maximum data integrity. With store-and-forward switching, the entire packet must be received into a buffer and checked for validity before being forwarded. This prevents errors from being propagated throughout the network.

Network Management Options

The switch contains a comprehensive array of LEDs for “at-a-glance” monitoring of network and port status. They also include a management agent that allows you to configure or monitor the switch using its embedded management software.

Description of Hardware

10/100/1000BASE-T Ports

The switch contains 24 RJ-45 ports that operate at 10 Mbps or 100 Mbps, half or full duplex, or at 1000 Mbps, full duplex. Because all ports on the switch support automatic MDI/MDI-X operation, you can use straight-through cables for all network connections to PCs or servers, or to other switches or hubs. (See “1000BASE-T Pin Assignments” on page B-5.)

Each of these ports support auto-negotiation, so the optimum transmission mode (half or full duplex), and data rate (10, 100, or 1000 Mbps) can be selected automatically. If a device connected to one of these ports does not support auto-negotiation, the communication mode of that port can be configured manually.

SFP Slots

The Small Form Factor Pluggable (SFP) transceiver slots are shared with four of the RJ-45 ports (ports 21-24). In its default configuration, if an SFP transceiver (purchased separately) is installed in a slot and has a valid link on its port, the associated RJ-45 port is disabled and cannot be used. The switch can also be configured to force the use of an RJ-45 port or SFP slot, as required.

Port and Power Status LEDs

The switch includes a display panel for key system and port indications that simplify installation and network troubleshooting. The LEDs, which are located on the front panel for easy viewing, are shown below and described in the following tables.

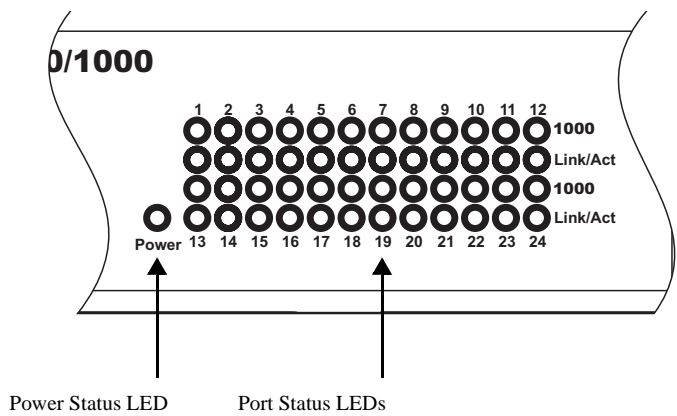


Figure 1-3 Port LEDs and Power LED

Table 1-1 Port Status LEDs

LED	Condition	Status
Gigabit Ethernet Ports (Ports 1-24)		
Link/Act (Link/Activity)	On/Flashing Green	Port has established a valid network connection. Flashing indicates activity.
	Off	There is no valid link on the port.
1000 Mbps	On Green	Port is operating at 1000 Mbps.
	Off	Port is operating at 10 or 100 Mbps.

Table 1-2 Power Status LED

LED	Condition	Status
Power	Green	Internal power is operating normally.
	Off	Power off.

Power Supply Socket

The power socket is located on the rear panel of the switch. The standard power socket is for the AC power cord.

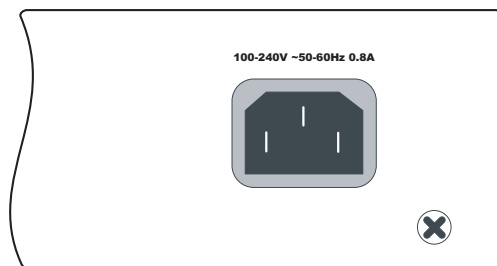


Figure 1-4 Power Supply Socket

Features and Benefits

Connectivity

- 24 10/100/1000 Mbps ports for easy Gigabit Ethernet integration and for protection of your investment in legacy LAN equipment.
- Auto-negotiation enables each RJ-45 port to automatically select the optimum communication mode (half or full duplex) if this feature is supported by the attached device; otherwise the port can be configured manually.
- RJ-45 10/100/1000BASE-T ports support auto MDI/MDI-X pinout selection.
- Unshielded (UTP) cable supported on all RJ-45 ports: Category 3 or better for 10 Mbps connections, Category 5 or better for 100 Mbps connections, and Category 5, 5e, 6 or better for 1000 Mbps connections.
- IEEE 802.3-2005 Ethernet, Fast Ethernet, and Gigabit Ethernet.

Expandability

- 4 Small Form Factor Pluggable (SFP) transceiver slots (shared with 1000BASE-T ports)
- Supports 1000BASE-SX, 1000BASE-LX and 1000BASE-LH SFP transceivers.

Performance

- Transparent bridging.
- Provides store-and-forward switching
- Supports Jumbo frames up to 9.6 Kbytes
- Supports flow control
- Broadcast storm control

Management

- “At-a-glance” LEDs for easy troubleshooting.
- Network management agent
 - Manages switch in-band or out-of-band
 - Supports web-based interface

CHAPTER 2

NETWORK PLANNING

Introduction to Switching

A network switch allows simultaneous transmission of multiple packets via non-crossbar switching. This means that it can partition a network more efficiently than bridges or routers. Switches have, therefore, been recognized as one of the most important building blocks for today's networking technology.

When performance bottlenecks are caused by congestion at the network access point (such as the network card for a high-volume file server), the device experiencing congestion (server, power user or hub) can be attached directly to a switched port. And, by using full-duplex mode, the bandwidth of the dedicated segment can be doubled to maximize throughput.

When networks are based on repeater (hub) technology, the distance between end stations is limited by a maximum hop count. However, a switch turns the hop count back to zero. So subdividing the network into smaller and more manageable segments, and linking them to the larger network by means of a switch, removes this limitation.

A switch can be easily configured in any Ethernet, Fast Ethernet, or Gigabit Ethernet, network to significantly boost bandwidth while using conventional cabling and network cards.

Application Examples

The EZ Switch 10/100/1000 is not only designed to segment your network, but also to provide a wide range of options in setting up network connections. Some typical applications are described below.

Collapsed Backbone

The EZ Switch 10/100/1000 is an excellent choice for mixed Ethernet, Fast Ethernet, and Gigabit Ethernet installations where significant growth is expected in the near future. In a basic stand-alone configuration, it can provide direct full-duplex connections for up to 24 workstations or servers. You can easily build on this basic configuration, adding direct full-duplex connections to workstations or servers. When the time comes for further expansion, just connect to another hub or switch using one of the Gigabit Ethernet ports built into the front panel, or a Gigabit Ethernet port on a plug-in SFP transceiver.

In the figure below, the 24-port switch is operating as a collapsed backbone for a small LAN. It is providing dedicated 10 Mbps full-duplex connections to workstations, 100 Mbps full-duplex connections to power users, and 1 Gbps full-duplex connections to servers.

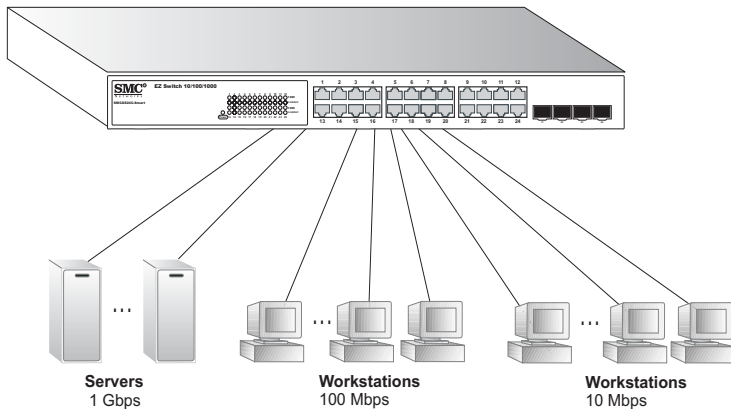


Figure 2-1 Collapsed Backbone

Central Wiring Closet

With 24 parallel bridging ports (i.e., 24 distinct collision domains), this switch can collapse a complex network down into a single efficient bridged node, increasing overall bandwidth and throughput.

In the figure below, the 1000BASE-T RJ-45 ports on the switch are providing 1 Gbps full-duplex connections for up to 24 local segments. In addition, the switch is also connecting remote servers over fiber optic cable at 1 Gbps.

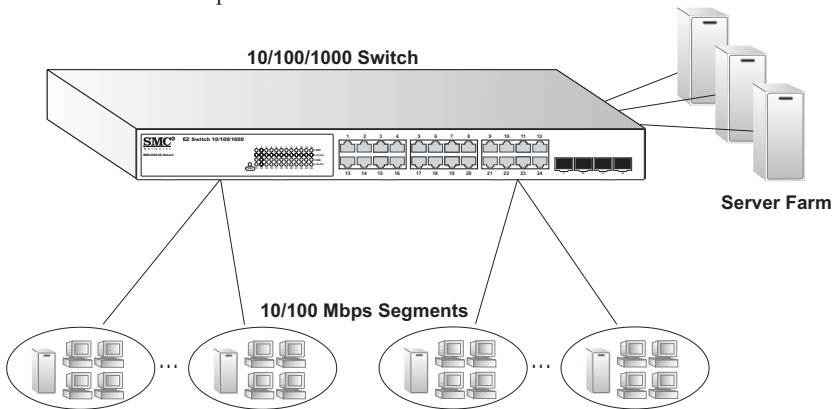


Figure 2-2 Central Wiring Closet

Remote Connections with Fiber Cable

Fiber optic technology allows for longer cabling than any other media type. A 1000BASE-SX (MMF) link can connect to a site up to 550 meters away, a 1000BASE-LX (SMF) link up to 5 km, and a 1000BASE-ZX link up to 100 km. This allows a switch stack to serve as a collapsed backbone, providing direct connectivity for a widespread LAN.

A 1000BASE-SX SFP transceiver can be used for a high-speed connection between floors in the same building, and a 1000BASE-LX transceiver can be used for high-bandwidth core connections between buildings in a campus setting. For long-haul connections, a 1000BASE-ZX SFP transceiver can be used to reach another site up to 100 kilometers away.

The figure below illustrates three EZ Switch 10/100/1000 switch stacks interconnecting multiple segments with fiber cable.

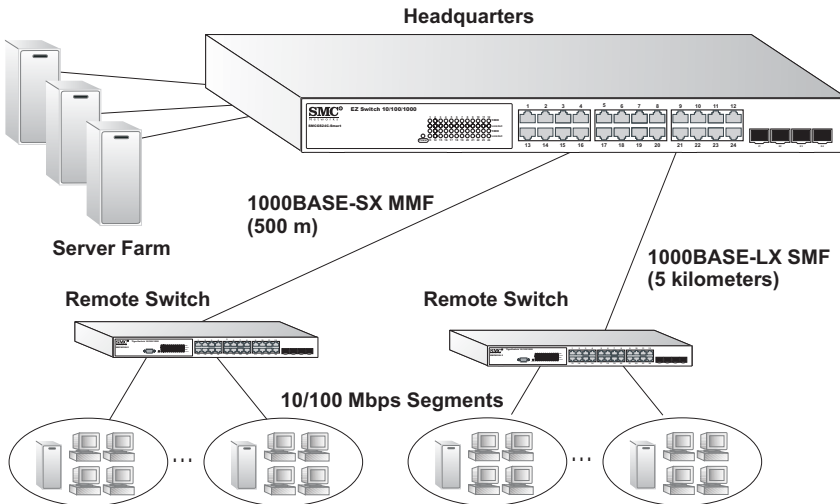


Figure 2-3 Remote Connections with Fiber Cable

Making VLAN Connections

The switch supports VLANs that can be used to organize any group of network nodes into separate broadcast domains. VLANs confine broadcast traffic to the originating group, and can eliminate broadcast storms in large networks. This provides a more secure and cleaner network environment.

VLANs can be based on untagged port groups, or traffic can be explicitly tagged to identify the VLAN to which it belongs. Untagged VLANs can be used for small networks attached to a single switch. However, tagged VLANs should be used for larger networks, and all the VLANs assigned to the inter-switch links.

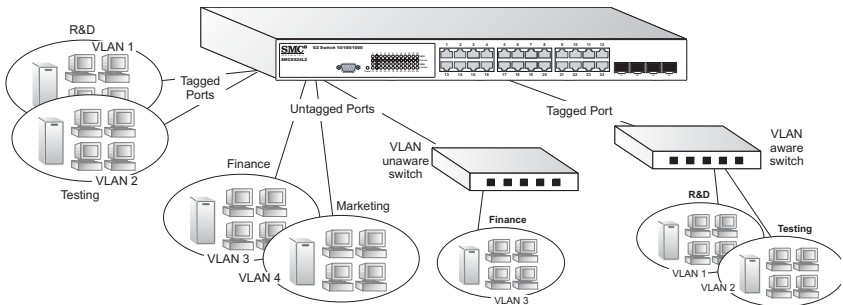


Figure 2-4 Making VLAN Connections

Note: When connecting to a switch that does not support IEEE 802.1Q VLAN tags, use untagged ports.

Application Notes

1. Full-duplex operation only applies to point-to-point access (such as when a switch is attached to a workstation, server or another switch). When the switch is connected to a hub, both devices must operate in half-duplex mode.
2. For network applications that require routing between dissimilar network types, you can attach the switch directly to a multi-protocol router.
3. As a general rule, the length of fiber optic cable for a single switched link should not exceed:
 - 1000BASE-SX: 550 m (1805 ft) for multimode fiber
 - 1000BASE-LX: 5 km (3.1 miles) for single-mode fiber
 - 1000BASE-ZX: 100 km (62.1 miles) for single-mode fiber

However, power budget constraints must also be considered when calculating the maximum cable length for your specific environment.

CHAPTER 3

INSTALLING THE SWITCH

Selecting a Site

EZ Switch 10/100/1000 units can be mounted in a standard 19-inch equipment rack or on a flat surface. Be sure to follow the guidelines below when choosing a location.

- The site should:
 - be at the center of all the devices you want to link and near a power outlet.
 - be able to maintain its temperature within 0 to 40 °C (32 to 104 °F) and its humidity within 10% to 90%, non-condensing
 - provide adequate space (approximately five centimeters or two inches) on all sides for proper air flow
 - be accessible for installing, cabling and maintaining the devices
 - allow the status LEDs to be clearly visible
- Make sure twisted-pair cable is always routed away from power lines, fluorescent lighting fixtures and other sources of electrical interference, such as radios and transmitters.
- Make sure that the unit is connected to a separate grounded power outlet that provides 100 to 240 VAC, 50 to 60 Hz, is within 2 m (6.6 feet) of each device and is powered from an independent circuit breaker. As with any equipment, using a filter or surge suppressor is recommended.

Ethernet Cabling

To ensure proper operation when installing the switches into a network, make sure that the current cables are suitable for 10BASE-T, 100BASE-TX or 1000BASE-T operation. Check the following criteria against the current installation of your network:

- Cable type: Unshielded twisted pair (UTP) or shielded twisted pair (STP) cables with RJ-45 connectors; Category 3 or better for 10BASE-T, Category 5 or better for 100BASE-TX, and Category 5, 5e or 6 for 1000BASE-T.
- Protection from radio frequency interference emissions
- Electrical surge suppression
- Separation of electrical wires (switch related or other) and electromagnetic fields from data based network wiring
- Safe connections with no damaged cables, connectors or shields

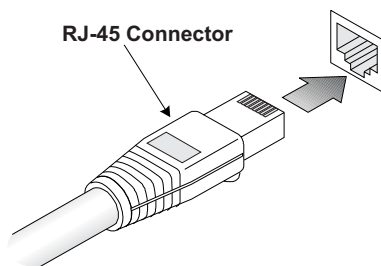


Figure 3-1 RJ-45 Connections

Equipment Checklist

After unpacking the EZ Switch 10/100/1000 unit, check the contents to be sure you have received all the components. Then, before beginning the installation, be sure you have all other necessary installation equipment.

Package Contents

- EZ Switch 10/100/1000 unit, SMC GS24C-Smart
- Four adhesive foot pads
- Bracket Mounting Kit containing two brackets and eight screws for attaching the brackets to the switch
- Power cord—either US, Continental Europe or UK
- User Guide CD
- SMC Warranty Registration Card—be sure to complete and return to SMC

Optional Rack-Mounting Equipment

If you plan to rack-mount the switches, be sure to have the following equipment available:

- Four mounting screws for each device you plan to install in a rack—these are not included
- A screwdriver (Phillips or flathead, depending on the type of screws used)

Mounting

The EZ Switch 10/100/1000 unit can be mounted in a standard 19-inch equipment rack or on a desktop or shelf. Mounting instructions for each type of site follow.

Rack Mounting

Before rack mounting the switch, pay particular attention to the following factors:

- **Temperature:** Since the temperature within a rack assembly may be higher than the ambient room temperature, check that the rack-environment temperature is within the specified operating temperature range (see page C-2).
- **Mechanical Loading:** Do not place any equipment on top of a rack-mounted unit.
- **Circuit Overloading:** Be sure that the supply circuit to the rack assembly is not overloaded.
- **Grounding:** Rack-mounted equipment should be properly grounded. Particular attention should be given to supply connections other than direct connections to the mains.

To rack-mount devices:

1. Attach the brackets to the device using the screws provided in the Bracket Mounting Kit.

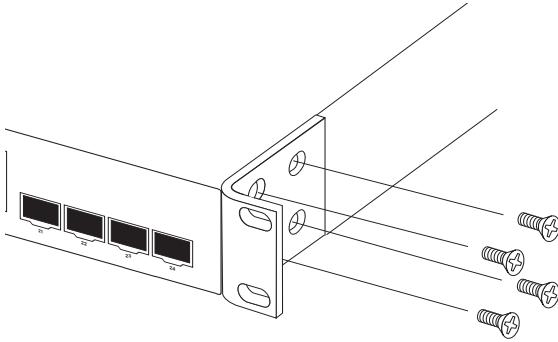


Figure 3-2 Attaching the Brackets

2. Mount the device in the rack, using four rack-mounting screws (not provided).

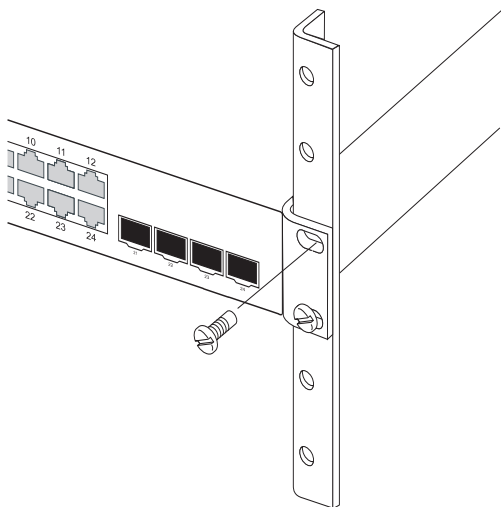


Figure 3-3 Installing the Switch in a Rack

3. If installing a single switch only, turn to “Connecting to a Power Source” at the end of this chapter.
4. If installing multiple switches, mount them in the rack, one below the other, in any order.

Desktop or Shelf Mounting

1. Attach the four adhesive feet to the bottom of the first switch.

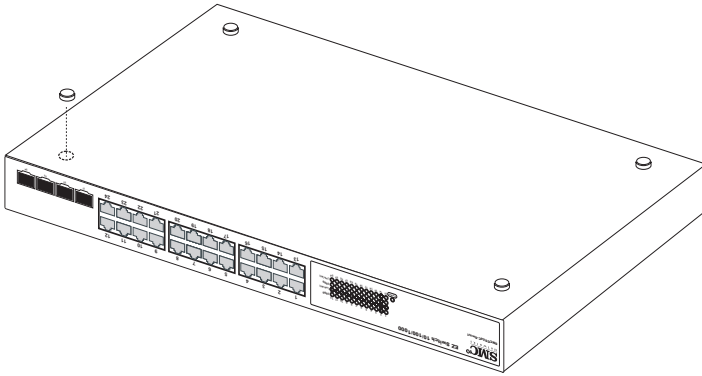


Figure 3-4 Attaching the Adhesive Feet

2. Set the device on a flat surface near an AC power source, making sure there are at least two inches of space on all sides for proper air flow.
3. If installing a single switch only, go to “Connecting to a Power Source” at the end of this chapter.
4. If installing multiple switches, attach four adhesive feet to each one. Place each device squarely on top of the one below, in any order.

Installing an SFP Transceiver

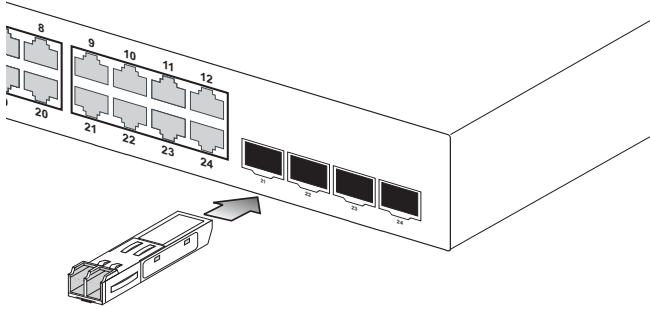


Figure 3-5 Inserting an SFP Transceiver into a Slot

The switch supports the following optional transceivers:

- 1000BASE-SX (SMCBGSLCX1)
- 1000BASE-LX (SMCBGLLCX1)
- 1000BASE-ZX (SMCBGZLCX1)

To install an SFP transceiver, do the following:

1. Consider network and cabling requirements to select an appropriate transceiver type. Refer to “Connectivity Rules” on page 4-6.
2. Insert the transceiver with the optical connector facing outward and the slot connector facing down. Note that SFP transceivers are keyed so they can only be installed in one orientation.
3. Slide the transceiver into the slot until it clicks into place.

Note: SFP transceivers are hot-swappable. The switch does not need to be powered off before installing or removing a transceiver. However, always first disconnect the network cable before removing a transceiver.

Note: SFP transceivers are not provided in the switch package.

Connecting to a Power Source

To connect a device to a power source:

1. Insert the power cable plug directly into the socket located at the back of the device.

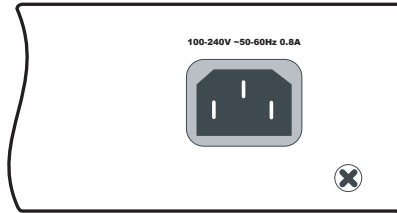


Figure 3-6 Power Socket

2. Plug the other end of the cable into a grounded, 3-pin, AC power source.

Note: For international use, you may need to change the AC line cord. You must use a line cord set that has been approved for the socket type in your country.

3. Check the front-panel LEDs as the device is powered on to be sure the Power LED is on. If not, check that the power cable is correctly plugged in.

CHAPTER 4

MAKING NETWORK CONNECTIONS

Connecting Network Devices

The EZ Switch 10/100/1000 units are designed to interconnect multiple segments (or collision domains). It can be connected to network cards in PCs and servers, as well as to hubs, switches or routers. It may also be connected to devices using optional SFP transceivers.

Twisted-Pair Devices

Each device requires an unshielded twisted-pair (UTP) cable with RJ-45 connectors at both ends. Use Category 5, 5e or 6 cable for 1000BASE-T connections, Category 5 or better for 100BASE-TX connections, and Category 3 or better for 10BASE-T connections.

Cabling Guidelines

The RJ-45 ports on the switch support automatic MDI/MDI-X pinout configuration, so you can use standard straight-through twisted-pair cables to connect to any other network device (PCs, servers, switches, routers, or hubs).

See Appendix B “Cables” for further information on cabling.



Caution: Do not plug a phone jack connector into an RJ-45 port. This will damage the switch. Use only twisted-pair cables with RJ-45 connectors that conform to FCC standards.

Connecting to PCs, Servers, Hubs and Switches

1. Attach one end of a twisted-pair cable segment to the device's RJ-45 connector.

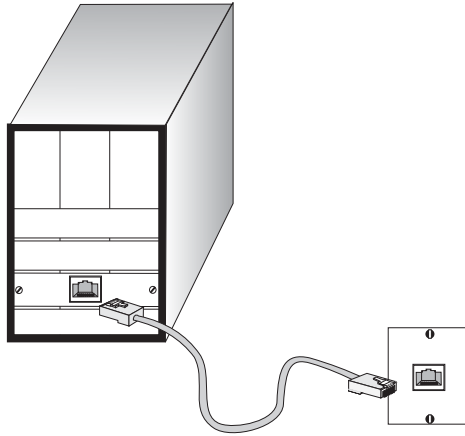


Figure 4-1 Making Twisted-Pair Connections

2. If the device is a PC card and the switch is in the wiring closet, attach the other end of the cable segment to a modular wall outlet that is connected to the wiring closet. (See “Network Wiring Connections” on page 4-3.) Otherwise, attach the other end to an available port on the switch.

Make sure each twisted pair cable does not exceed 100 meters (328 ft) in length.

3. As each connection is made, the Link LED (on the switch) corresponding to each port turns on to indicate that the connection is valid.

Network Wiring Connections

Today, the punch-down block is an integral part of many of the newer equipment racks. It is actually part of the patch panel. Instructions for making connections in the wiring closet with this type of equipment follows.

1. Attach one end of a patch cable to an available port on the switch, and the other end to the patch panel.
2. If not already in place, attach one end of a cable segment to the back of the patch panel where the punch-down block is located, and the other end to a modular wall outlet.
3. Label the cables to simplify future troubleshooting. See “Cable Labeling and Connection Records” on page 4-8.

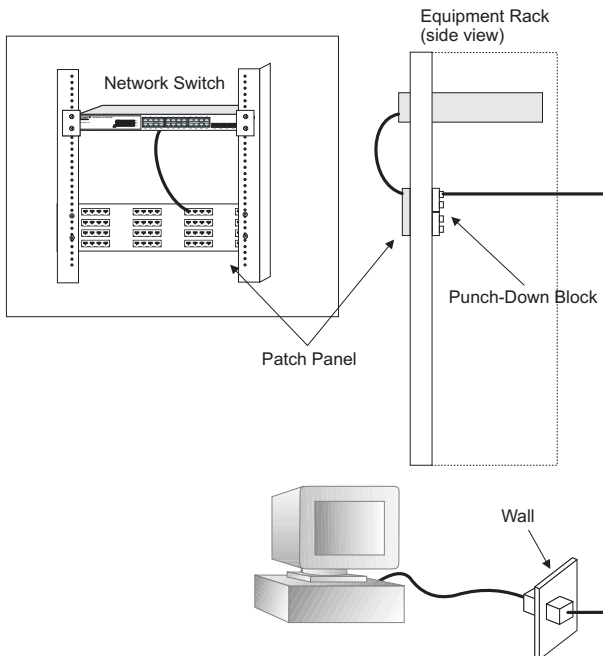


Figure 4-2 Wiring Closet Connections

Fiber Optic SFP Devices

An optional Gigabit SFP transceiver (1000BASE-SX, 1000BASE-LX or 1000BASE-ZX) can be used for a backbone connection between switches, or for connecting to a high-speed server.

Each single-mode fiber port requires 9/125 micron single-mode fiber optic cable with an LC connector at both ends. Each multimode fiber optic port requires 50/125 or 62.5/125 micron multimode fiber optic cabling with an LC connector at both ends.

Warning: the switch use lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.

Note: When selecting a fiber SFP device, considering safety, please make sure that it can function at a temperature that is not less than the recommended maximum operational temperature of the product. You must also use an approved Laser Class 1 SFP transceiver.

Hinweis: Bei der Wahl eines Glasfasertransceivers muß für die Beurteilung der Gesamtsicherheit beachtet werden, das die maximale Umgebungstemperatur des Transceivers für den Betrieb nicht niedriger ist als die für dieses Produkts. Der Glasfasertransceiver muß auch ein überprüftes Gerät der Laser Klasse 1 sein.

1. Remove and keep the LC port's rubber cover. When not connected to a fiber cable, the rubber cover should be replaced to protect the optics.
2. Check that the fiber terminators are clean. You can clean the cable plugs by wiping them gently with a clean tissue or cotton ball moistened with a little ethanol. Dirty fiber terminators on fiber cables will impair the quality of the light transmitted through the cable and lead to degraded performance on the port.

3. Connect one end of the cable to the LC port on the switch and the other end to the LC port on the other device. Since LC connectors are keyed, the cable can be attached in only one orientation.

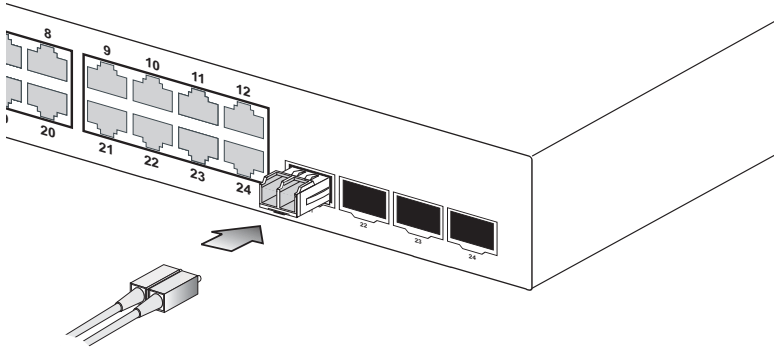


Figure 4-3 Making Connections to SFP Transceivers

4. As a connection is made, check the Link LED on the switch corresponding to the port to be sure that the connection is valid.

The 1000BASE-SX, 1000BASE-LX and 1000BASE-ZX fiber optic ports operate at 1 Gbps full duplex. The maximum length for fiber optic cable operating at Gigabit speed will depend on the fiber type as listed under “1000 Mbps Gigabit Ethernet Collision Domain” on page 4-6.

Connectivity Rules

When adding hubs (repeaters) to your network, please follow the connectivity rules listed in the manuals for these products. However, note that because switches break up the path for connected devices into separate collision domains, you should not include the switch or connected cabling in your calculations for cascade length involving other devices.

1000BASE-T Cable Requirements

All Category 5 UTP cables that are used for 100BASE-TX connections should also work for 1000BASE-T, providing that all four wire pairs are connected. However, it is recommended that for all critical connections, or any new cable installations, Category 5e (enhanced Category 5) or Category 6 cable should be used. The Category 5e specification includes test parameters that are only recommendations for Category 5. Therefore, the first step in preparing existing Category 5 cabling for running 1000BASE-T is a simple test of the cable installation to be sure that it complies with the IEEE 802.3-2005 standards.

1000 Mbps Gigabit Ethernet Collision Domain

Table 4-1 Maximum 1000BASE-T Gigabit Ethernet Cable Length

Cable Type	Maximum Cable Length	Connector
Category 5, 5e, 6 100-ohm UTP or STP	100 m (328 ft)	RJ-45

Table 4-2 Maximum 1000BASE-SX Fiber Optic Cable Length

Fiber Diameter	Fiber Bandwidth	Cable Length Range	Connector
62.5/125 micron multimode fiber (MMF ²)	160 MHz/km	2-220 m (7-722 ft)	LC
	200 MHz/km	2-275 m (7-902 ft)	LC
50/125 micron multimode fiber (MMF ²)	400 MHz/km	2-500 m (7-1641 ft)	LC
	500 MHz/km	2-550 m (7-1805 ft)	LC

Table 4-3 Maximum 1000BASE-LX Fiber Optic Cable Length

Fiber Diameter	Fiber Bandwidth	Cable Length Range	Connector
9/125 micron single-mode fiber	N/A	2 m - 5 km (7 ft - 3.2 miles)	LC

Table 4-4 Maximum 1000BASE-ZX Fiber Optic Cable Length

Fiber Diameter	Fiber Bandwidth	Cable Length Range	Connector
9/125 micron single-mode fiber	N/A	70* - 100 km (43.5 - 62.1 miles)	LC

* For link spans exceeding 70 km, you may need to use premium single mode fiber or dispersion shifted single mode fiber

100 Mbps Fast Ethernet Collision Domain

Table 4-5 Maximum Fast Ethernet Cable Length

Type	Cable Type	Maximum Cable Length	Connector
100BASE-TX	Category 5 or better 100-ohm UTP or STP	100 m (328 ft)	RJ-45

10 Mbps Ethernet Collision Domain

Table 4-6 Maximum Ethernet Cable Length

Type	Cable Type	Maximum Length	Connector
10BASE-T	Categories 3, 4, 5 or better 100-ohm UTP	100 m (328 ft)	RJ-45

Cable Labeling and Connection Records

When planning a network installation, it is essential to label the opposing ends of cables and to record where each cable is connected. Doing so will enable you to easily locate inter-connected devices, isolate faults and change your topology without need for unnecessary time consumption.

To best manage the physical implementations of your network, follow these guidelines:

- Clearly label the opposing ends of each cable.
- Using your building's floor plans, draw a map of the location of all network-connected equipment. For each piece of equipment, identify the devices to which it is connected.
- Note the length of each cable and the maximum cable length supported by the switch ports.
- For ease of understanding, use a location-based key when assigning prefixes to your cable labeling.
- Use sequential numbers for cables that originate from the same equipment.
- Differentiate between racks by naming accordingly.
- Label each separate piece of equipment.
- Display a copy of your equipment map, including keys to all abbreviations at each equipment rack.

CHAPTER 5

CONFIGURING THE SWITCH

Using the Web Interface

This switch provides an embedded HTTP web agent. Using a web browser you can configure the switch and view statistics to monitor network activity. The web agent can be accessed by any computer on the network using a standard web browser (Internet Explorer 5.5 or above, or Mozilla Firefox 1.0 or above).

Prior to accessing the switch from a web browser, be sure you have first performed the following tasks:

1. Configure the switch with a valid IP address, subnet mask, and default gateway. (Defaults: IP address 192.168.2.10; Subnet mask 255.255.255.0; Gateway 0.0.0.0)
2. Set a new password using the web interface. (Default: “smcadmin”). Access to the web interface is controlled by the password. See “Configuring the Logon Password” on page 5-14.

Note: If you cannot remember the switch's IP address, you can restore the original settings by following the procedure described in the “Troubleshooting” section.

Navigating the Web Browser Interface

To access the web-browser interface you must first enter a password. The user has read/write access to all configuration parameters and statistics. The default password for the switch is “smcadmin.”

Note: If user input is not detected within five minutes, the current session is terminated.

Home Page

When your web browser connects with the switch’s web agent, the home page is displayed as shown below. The home page displays the Main Menu on the left side of the screen and System Information on the right side. The Main Menu links are used to navigate to other menus, and display configuration parameters and statistics..



Figure 5-1 Home Page

Configuration Options

Configurable parameters have a dialog box or a drop-down list. Once a configuration change has been made on a page, be sure to click on the Apply button to confirm the new setting. The following table summarizes the web page configuration buttons.

Table 5-1 Web Page Configuration Buttons

Button	Action
Apply	Sets specified values to the system.
Cancel	Discards all changes and restores current values.
Help	Links directly to web help.

Notes: To ensure proper screen refresh, be sure that Internet Explorer is configured as follows: Under the menu “Tools / Internet Options / General / Temporary Internet Files / Settings,” the setting for item “Check for newer versions of stored pages” should be “Every visit to the page.”

Panel Display

The web interface displays an image of the switch's ports. A port turns green when the corresponding front-panel port is connected to another device. To show port numbers, place the mouse pointer over the port.



Figure 5-2 Front Panel Indicators

Main Menu

Using the onboard web agent, you can define system parameters, manage and control the switch, and all its ports, or monitor network conditions. The following table briefly describes the selections available from the web-browser interface.

Table 5-2 Switch Main Menu

Menu	Description	Page
STATUS		5-6
Overview	Provides a basic system description, including system name, IP address, port, trunk, and VLAN information.	5-6
Statistics	Shows statistics for port, interface, and RMON.	5-9
SYSTEM		5-12
Name	Shows the name of the switch.	5-12
LAN Settings	Sets the LAN IP address, subnet mask, and gateway IP address.	5-13
Password	Changes the password.	5-14
Tools		5-15
Restore to Factory Defaults	Force the switch to perform a power reset and restore the original factory settings.	5-15
Upgrade Firmware	Upgrade the switch system firmware using a file provided by SMC.	5-16
Restart	Restarts the switch.	5-17
Register Product	Enables you to connect to the SMC web site to register your switch.	5-18
Static MAC	Adds static MAC addresses to the switch MAC address table.	5-18
Counter Config	Selects traffic statistics you want to monitor.	5-19

Table 5-2 Switch Main Menu (Continued)

Menu	Description	Page
PORTS		5-21
Settings	Configure the speed and duplex mode of the port.	5-21
Rate Limiting	Sets the rate limiting parameters for ports.	5-22
Storm Control	Sets the broadcast storm control parameters.	5-24
Port Mirroring	Sets up the port mirroring features of the switch to enable traffic monitoring.	5-25
Cable Diagnostic	Diagnoses cable faults.	5-26
TRUNKS		5-27
Membership	Specifies ports to group into static trunks	5-28
Settings	Configures trunk connection settings	5-28
Rate Limiting	Sets the rate limiting parameters for trunks.	5-29
VLANS		5-30
VLAN Membership	Configure VLAN port groups.	5-30
VLAN Port Config	Configures VLAN behavior for individual ports and trunks.	5-30
QOS		5-33
Settings	Sets the priority of packets forwarded through the switch.	5-33
Security		5-35
IP Filter	Sets up port IP control filters.	5-35
Port Security	Sets security policy for port.	5-37
ACL	Sets up management access filter.	5-39
IGMP Snoop		5-40
Settings	Sets up IGMP Snooping configuration	5-41
Status	Shows IGMP Snooping instances and port states.	5-41
LOGOUT	Quits to the Login page.	

Web Configuration

Displaying Status Overview

You can easily identify the system by displaying the device name, location and contact information.

Field Attributes

System Information

- **System Name** – Name assigned to the switch system.
- **Number of Ports** – Number of built-in ports.
- **Hardware Version** – Hardware version of the main board.
- **Code Version** – Version number of the code.
- **Serial Number** – The serial number of the switch.

Address Information

- **Management VLAN** – ID of the configured VLAN (this is set to 1 and cannot be changed) all ports on the unit are members of VLAN 1. The management station must always be attached to a port on VLAN 1.
- **IP Address** – Address of the VLAN to which the management station is attached. (Note that the management station must always be on VLAN 1. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods.
- **Subnet Mask** – This mask identifies the host address bits used for routing to specific subnets. (Default: 255.255.255.0)
- **Gateway IP Address** – IP address of the gateway router between the switch and management stations that exist on other network segments. (Default: 0.0.0.0)
- **MAC Address** – The physical layer address of the switch.

Port Information

- **Type** – Indicates the port type.
- **Link Status** – Indicates if the link is Up or Down.

- **Speed/Duplex Status** – Shows the current speed and duplex mode.
 - **10hdx:** 10 Mbps half duplex.
 - **10fdx:** 10 Mbps full duplex.
 - **100hdx:** 100 Mbps half duplex.
 - **100fdx:** 100 Mbps full duplex.
 - **1000fdx:** 1000 Mbps full duplex.
- **Flow Control Status** – Indicates whether flow control is enabled or disabled. (IEEE 802.3x, or Back-Pressure)
- **Autonegotiation** – Shows if auto-negotiation is enabled or disabled.
- **Frame Type** – Either “Tagged” or “All.” “Tagged” means that the port will only send and receive VLAN-tagged packets. When set to “All,” the port will also send and receive untagged packets.
- **PVID** – The VLAN ID assigned to untagged frames received on the interface. (Default: 1)

Trunk Information

- **Trunk** – The trunk label. “T1” through “T8” are used as trunk labels.
- **Type** – All trunks and ports on this switch are 10/100/1000Mbps
- **Trunk Status** – Indicates the speed and duplex setting of the trunk. This can be changed on the TRUNKS > Settings page.
 - **10hdx:** 10 Mbps half duplex.
 - **10fdx:** 10 Mbps full duplex.
 - **100hdx:** 100 Mbps half duplex.
 - **100fdx:** 100 Mbps full duplex.
 - **1000fdx:** 1000 Mbps full duplex.
- **Ports** – The ports that are members of the trunk.

VLAN Information

- **VLAN ID** – A number in the range 1 - 4094 which identifies the VLAN.
- **VLAN Member** – A list of the ports that are members of the VLAN.
By default, all ports are members of VLAN 1.

Web – Click STATUS, Overview.

Status Overview

This page displays the status of your Switch.

REFRESH

System Information

System Name	SMCGS24C-Smart
Number of Ports	24
Hardware Version	R01
Code Version	SMCGS24C-S 1.4
Serial Number	0001

Address Information

Management VLAN	1
IP Address	192.168.2.10
Subnet Mask	255.255.255.0
Gateway IP Address	0.0.0.0
MAC Address	00-01-c1-00-00-01

Port Information

Port	Type	Link Status	Speed/Duplex Status	Flow Control Status	Auto-negotiation	Frame Type	PVID
1	10/100/1000M	Up	100fdx	Disabled	Enabled	All	1
2	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
3	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
4	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
5	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
6	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
7	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
8	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
9	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
10	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
11	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
12	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
13	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
14	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
15	10/100/1000M	Down	Auto	Disabled	Enabled	All	1
16	10/100/1000M	Down	Auto	Disabled	Enabled	All	1

Trunk Information

Trunk	Type	Trunk Status	Ports
No Trunks Configured			

VLAN Information

VLAN ID	VLAN Members
1	1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16

HELP

REFRESH

Figure 5-3 Switch Information

Showing Port Statistics

You can display statistics on network traffic from the ports. These statistics can be used to identify potential problems with the switch (such as a faulty port or unusually heavy loading). All values displayed have been accumulated since the last system reboot, but can be reset to zero by clicking the CLEAR button. The current statistics are not displayed until you click the REFRESH button.

Table 5-3 Port Statistics

Parameter	Description
<i>Interface Statistics</i>	
Received Octets	The total number of octets received on the interface, including framing characters.
Received Unicast Packets	The number of subnetwork-unicast packets delivered to a higher-layer protocol.
Received Errors	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Transmitted Multicast Packets	The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent.
Transmitted Broadcast Packets	The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a broadcast address at this sub-layer, including those that were discarded or not sent.
Received High Priority Packets	The total number of received packets that set as High Priority in the QoS settings.
Transmitted High Priority Packets	The total number of transmitted packets that set as High Priority in the QoS settings.
Received Multicast Packets	The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a multicast address at this sub-layer.

Table 5-3 Port Statistics (Continued)

Parameter	Description
Received Broadcast Packets	The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a broadcast address at this sub-layer.
Transmitted Octets	The total number of octets transmitted out of the interface, including framing characters.
Transmitted Unicast Packets	The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent.
Transmitted Errors	The number of outbound packets that could not be transmitted because of errors.
Received Normal Priority Packets	The total number of received packets that set as High Priority in the QoS settings.
Transmitted Normal Priority Packets	The total number of transmitted packets that set as High Priority in the QoS settings.
<i>RMON Statistics</i>	
Drop Events	The total number of events in which packets were dropped due to lack of resources.
Received Frames	The total number of frames (bad, broadcast and multicast) received.
Multicast Frames	The total number of good frames received that were directed to this multicast address.
Undersize Frames	The total number of frames received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.
Fragments	The total number of frames received that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS or alignment error.
Collisions	The best estimate of the total number of collisions on this Ethernet segment.

Table 5-3 Port Statistics (Continued)

Parameter	Description
Received Bytes	Total number of bytes of data received on the network. This statistic can be used as a reasonable indication of Ethernet utilization.
Broadcast Frames	The total number of good frames received that were directed to the broadcast address. Note that this does not include multicast packets.
CRC/Alignment Errors	The number of CRC/alignment errors (FCS or alignment errors).
Oversize Frames	The total number of frames received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.
Jabbers	The total number of frames received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS or alignment error.
64 Bytes Frames	The total number of frames (including bad packets) received and transmitted that were 64 octets in length (excluding framing bits but including FCS octets).
65-127 Byte Frames 128-255 Byte Frames 256-511 Byte Frames 512-1023 Byte Frames 1024-1518 Byte Frames	The total number of frames (including bad packets) received and transmitted where the number of octets fall within the specified range (excluding framing bits but including FCS octets).

Web – Click STATUS, Statistics.



Figure 5-4 Port Statistics

Displaying System Name

You can easily identify the system by displaying the device name.

Field Attributes

- **Switch Name** – Name assigned to the switch system.

Web – Click System, Name.

Name

This page allows you to set a meaningful name for your switch, so that you can easily identify it when managing your network remotely.

Switch Name

Switch Name

HELP APPLY CANCEL

Figure 5-5 System Name

Setting the Switch's IP Address

This section describes how to configure an IP interface for management access over the network. The IP address for this switch is 192.168.2.10 by default. To manually configure an address, you need to change the switch's default settings (IP address 192.168.2.10 and netmask 255.255.255.0) to values that are compatible with your network. You may also need to establish a default gateway between the switch and management stations that exist on another network segment.

Field Attributes

- **DHCP Enabled** – Check the box to enable DHCP. (default: enabled)
- **LAN IP Address** – Address of the VLAN interface that is allowed management access. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. (Default : 192.168.2.10)
- **Subnet Mask** – This mask identifies the host address bits used for routing to specific subnets. (Default: 255.255.255.0)
- **Gateway IP Address** – IP address of the gateway router between this device and management stations that exist on other network segments. (Default: 0.0.0.0)

Note: If, at any point, you cannot remember the switch's IP address, you can restore the original settings by following the procedure described in the "Troubleshooting" section.

Manual Configuration

Web – Click System, LAN Settings. Enter the IP address, subnet mask and gateway, then click APPLY. Note that if you change the switch IP address, you must close the web interface and start a new session using the new IP address.

LAN Settings				
DHCP Enabled	<input checked="" type="checkbox"/>			
LAN IP Address	192	168	2	10
Subnet Mask	255	255	255	0
Gateway IP Address	0	0	0	0

HELP APPLY CANCEL

Figure 5-6 LAN Settings

Configuring the Logon Password

The administrator has write access for all parameters governing the onboard agent. You should therefore assign a new administrator password as soon as possible, and store it in a safe place.

Field Attributes

- **Password** – Specifies the user password.
(Range: 1-16 characters plain text, case sensitive)

Note: If you cannot remember the password, you can restore the original settings by following the procedure described in the “Troubleshooting” on page 61.

Web – Click System, Password. To change the password for the administrator, enter current password, the new password, confirm it by entering it again, then click APPLY.

Password Settings
Set a password to secure access to the Switch Web Management Interface.

Change Password

Current Password	<input type="password"/>	(Default: smcadmin)
New Password	<input type="password"/>	
Confirm New Password	<input type="password"/>	

Note: The password is case sensitive.

Note: If you forget your password, the only way to reset it is to reset the Switch's entire configuration to factory defaults.

HELP APPLY CANCEL

Figure 5-7 Password Settings


Tools

On the Tools page, you can restore the switch to default settings, upgrade the firmware of the switch, or restart the switch.

Restore to Factory Defaults

Force the switch to restore the original factory settings. To reset the switch, select "Reset to Factory Defaults" from the drop-down list and click APPLY. The LAN IP Address, Subnet Mask and Gateway IP Address will not be reset.

Web – Click System, Tools, Reset to Factory Defaults.

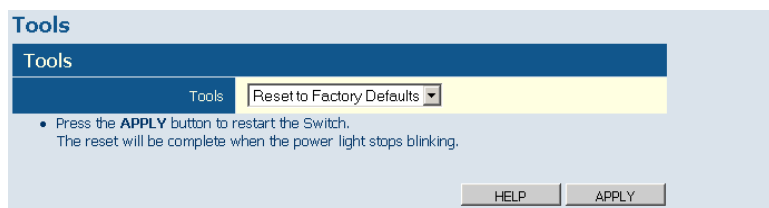


The screenshot shows a web interface with a 'Tools' section. A dark blue header bar contains the word 'Tools' in white. Below this, a yellow bar contains a 'Tools' label and a dropdown menu with 'Reset to Factory Defaults' selected. A bulleted instruction reads: 'Press the **APPLY** button to restart the Switch. The reset will be complete when the power light stops blinking.' At the bottom right are 'HELP' and 'APPLY' buttons.

Figure 5-8 Reset to Factory Defaults

Upgrade Firmware

Upgrades the switch system firmware using a file provided by SMC. Select “Upgrade Firmware” from the Tools drop-down list then click on the “Browse” button to select the firmware file. Click the APPLY button to upgrade the selected switch firmware file. You can download firmware files for your switch from the Support section of the SMC web site at www.smc.com.

Web – Click System, Tools, Upgrade Firmware.

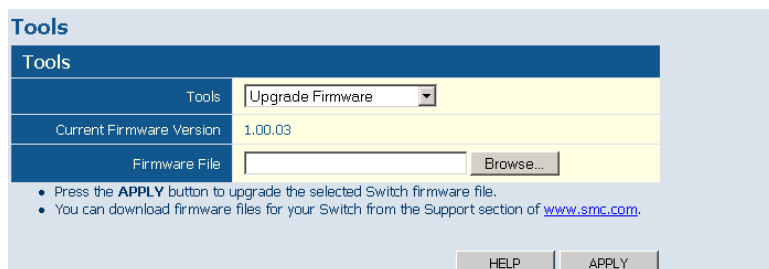

The screenshot shows a web interface with a 'Tools' section. A dark blue header bar contains the word 'Tools' in white. Below this, a yellow bar contains a 'Tools' label and a dropdown menu with 'Upgrade Firmware' selected. Below the dropdown, the 'Current Firmware Version' is displayed as '1.00.03'. Underneath, there is a 'Firmware File' label, an empty text input field, and a 'Browse...' button. A bulleted instruction reads: 'Press the **APPLY** button to upgrade the selected Switch firmware file. You can download firmware files for your Switch from the Support section of www.smc.com.' At the bottom right are 'HELP' and 'APPLY' buttons.

Figure 5-9 Upgrade Firmware

Upload/Download Configuration

Web – Click SYSTEM, Tools, Upload/Download Configuration. To upload or download the configuration file, select "Upload/Download Configuration" from the Tools drop-down list, then click "Upload" or "Download", and then click on the "Browse" button to select the file.

Tools

Tools	Upload/Download configuration ▼
Operation	<input type="radio"/> Upload <input type="radio"/> Download
Firmware File	<input type="text"/> <input type="button" value="Browse..."/>

- Press the **APPLY** button to upload/download the Switch configuration file.

Note: Please be patient as the firmware upgrade will take a few minutes to complete.

Figure 5-10 Upload/Download configuration

Restart Switch

Web – Click SYSTEM, Tools, Restart Switch. To restart the switch, select from the Tools drop-down list, and then click APPLY. The reset will be complete when the user interface displays the login page.

Tools

Tools	Restart Switch ▼
-------	------------------

- Press the **APPLY** button to restart the Switch.
The reset will be complete when the power light stops blinking.

Figure 5-11 Restart Switch

Register Product

SMC request that you register your switch online, if you have not already done so. The Register Product page provides a convenient link to the SMC web site for this purpose.

Web – Click System, Register Product. Click the Register Now button to access the SMC web site and register your switch.

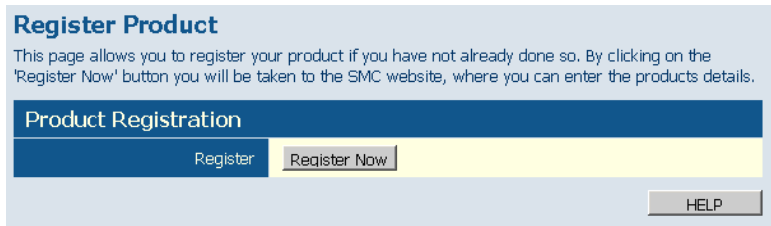


Figure 5-12 Register Product

Static MAC

Switches store the MAC addresses for all known devices in the attached network. This information is used to forward traffic directly between the inbound and outbound ports. All the MAC addresses learned by monitoring traffic are stored in a dynamic address table, which removes (ages out) any addresses that are not “seen” for a specified time period .

You can also manually configure static MAC addresses that are assigned to specific ports on the switch. A static MAC address is bound to a specific port and will not be moved or aged out. You can define up to 24 static MAC addresses on the switch.

Add Static MAC

Type the static MAC address and associated VLAN ID (1-4095) into corresponding fields in the Add Static MAC table. After clicking the ADD button, a new page opens to configure the Destination Mask for this MAC entry. Only one static MAC address can be added at a time.

Web – Click SYSTEM, Counter Config.

Statistics

This page allows you to set statistics you want to check on your Switch.

Note1: Received Unicast Packets can be enabled after Received Multicast Packets and Received Broadcast Packets are enabled.

Note2: Received Multicast Packets and Received Broadcast Packets can be disabled after Received Unicast Packets is disabled.

Note3: The above 2 rules are also applied to Transmitted Multicast Packets, Transmitted Unicast Packets and Transmitted Broadcast Packets.

Statistics Configuration

Interface Statistics

Received Octets	V	Received Multicast Packets	<input checked="" type="checkbox"/>
Received Unicast Packets	<input checked="" type="checkbox"/>	Received Broadcast Packets	<input checked="" type="checkbox"/>
Received Errors	<input checked="" type="checkbox"/>	Transmitted Octets	V
Transmitted Multicast Packets	<input checked="" type="checkbox"/>	Transmitted Unicast Packets	<input checked="" type="checkbox"/>
Transmitted Broadcast Packets	<input checked="" type="checkbox"/>	Transmitted Errors	<input checked="" type="checkbox"/>
Received High Priority Packets	<input type="checkbox"/>	Received Medium Priority Packets	<input type="checkbox"/>
Received Normal Priority Packets	<input type="checkbox"/>	Received Low Priority Packets	<input type="checkbox"/>
Transmitted High Priority Packets	<input type="checkbox"/>	Transmitted Medium Priority Packets	<input type="checkbox"/>
Transmitted Normal Priority Packets	<input type="checkbox"/>	Transmitted Low Priority Packets	<input type="checkbox"/>

RMON Statistics

Drop Events	<input type="checkbox"/>	Received Bytes	V
Received Frames	<input type="checkbox"/>	Broadcast Frames	<input checked="" type="checkbox"/>
Multicast Frames	<input checked="" type="checkbox"/>	CRC/Alignment Errors	<input checked="" type="checkbox"/>
Undersize Frames	<input type="checkbox"/>	Oversize Frames	<input type="checkbox"/>
Fragments	<input type="checkbox"/>	Jabbers	<input type="checkbox"/>
Collisions	<input checked="" type="checkbox"/>	64 Bytes Frames	<input type="checkbox"/>
65-127 Bytes Frames	<input type="checkbox"/>	128-255 Bytes Frames	<input type="checkbox"/>
256-511 Bytes Frames	<input type="checkbox"/>	512-1023 Bytes Frames	<input type="checkbox"/>
1024-1518 Bytes Frames	<input type="checkbox"/>		

HELP

APPLY

CANCEL

Figure 5-14 Counter Configuration

Port Configuration

You can use the Port Configuration page to manually fix the speed, duplex mode, and flow control.

Field Attributes

- **Speed/Duplex** – Allows you to manually set the port speed and duplex mode.
- **Flow Control** – Allows flow control to be enabled or disabled. When the box is checked, flow control is enabled.
- **Trunk** – Indicates if a port is a member of a trunk.

Web – Click PORTS, Settings.

Port Configuration
This page enables you to configure each Switch port.

Port	Speed/Duplex	Flow Control	Trunk
1	Auto Speed ▾	<input type="checkbox"/>	
2	Auto Speed ▾	<input type="checkbox"/>	
3	Auto Speed ▾	<input type="checkbox"/>	
4	Auto Speed ▾	<input type="checkbox"/>	
5	Auto Speed ▾	<input type="checkbox"/>	
6	Auto Speed ▾	<input type="checkbox"/>	
7	Auto Speed ▾	<input type="checkbox"/>	
8	Auto Speed ▾	<input type="checkbox"/>	
9	Auto Speed ▾	<input type="checkbox"/>	
10	Auto Speed ▾	<input type="checkbox"/>	
11	Auto Speed ▾	<input type="checkbox"/>	
12	Auto Speed ▾	<input type="checkbox"/>	
13	Auto Speed ▾	<input type="checkbox"/>	
14	Auto Speed ▾	<input type="checkbox"/>	
15	Auto Speed ▾	<input type="checkbox"/>	
16	Auto Speed ▾	<input type="checkbox"/>	

HELP APPLY CANCEL

Figure 5-15 Port Configuration

Configuring Rate Limits

This function allows the network manager to control the maximum rate for traffic transmitted or received on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the switch. Traffic that falls within the rate limit is transmitted or received, while packets that exceed the acceptable amount of traffic are dropped.

Rate limiting can be applied to individual ports or trunks. When an interface is configured with this feature, the traffic rate will be monitored by the hardware to verify conformity. Non-conforming traffic is dropped, conforming traffic is forwarded without any changes.

The Input/Output Bandwidth Limit field is a type-in box which accepts an integer number in the range 1 to 100. The number specifies the percentage of the total bandwidth of the port that can be used before packets are dropped or flow-control starts.

Web – Click PORTS, Rate Limiting. This page enables you to set the rate limiting parameters for each port on the switch.

Rate Limiting
 This page enables you to set the rate limiting parameters for each port on the Switch.

Port	Port Speed	Enable Input Rate Limiting	Input Bandwidth Limit (% of port speed)	Enable Output Rate Limiting	Output Bandwidth Limit (% of port speed)	Trunk
1	100fdx	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
2	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
3	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
4	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
5	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
6	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
7	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
8	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
9	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
10	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
11	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
12	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
13	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
14	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
15	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	
16	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	

HELP
 APPLY
 CANCEL

Figure 5-16 Rate Limiting

Storm Control

Broadcast storms may occur when a device on your network is malfunctioning, or if application programs are not well designed or properly configured. If there is too much broadcast traffic on your network, performance can be severely degraded or everything can come to complete halt.

You can protect your network from broadcast storms by setting a threshold for broadcast traffic for each port. Any broadcast packets exceeding the specified threshold will then be dropped.

Field Attributes

- **Type** – List the type of traffic which can be rate limited, including ICMP, learn frames, broadcast, multicast and flooded unicast frames.
- **Enable Storm Control** – Click the check box to enable storm control for the specific frame type.
- **Rate(number of frames per second)** – The Rate field is set by a single drop-down list. The same threshold is applied to every port on the switch. When the threshold is exceeded, packets are dropped, irrespective of the flow-control settings.

Web – Click PORTS, Storm Control. This page enables you to set the broadcast storm control parameters for every port on the switch.

Storm Control
This page enables you to set the storm control parameters for the Switch.

Type	Enable Storm Control	Rate(number of frame per second)
ICMP Rate	<input type="checkbox"/>	1k
Learn Frames Rate	<input type="checkbox"/>	1k
Broadcast Rate	<input type="checkbox"/>	1k
Multicast Rate	<input type="checkbox"/>	1k
Unknown Destination Unicast Rate	<input type="checkbox"/>	1k

HELP APPLY CANCEL

Figure 5-17 Port Broadcast Control

Port Mirroring

You can mirror traffic from any source port to a target port for real-time analysis. You can then attach a logic analyzer or RMON probe to the target port and study the traffic crossing the source port in a completely unobtrusive manner.

Field Attributes

Ports to Mirror

Select the ports that you want to mirror from this section of the page. A port will be mirrored when the "Mirroring Enabled" check-box is checked.

- **Port to Mirror to** – The port that will “duplicate” or “mirror” the traffic on the source port. Only incoming packets can be mirrored. Packets will be dropped when the available egress bandwidth is less than ingress bandwidth.

Note: If the total ingress bandwidth exceeds the mirror port's egress bandwidth, packets will eventually be dropped on ingress to the switch, which means they will not reach the mirror port or their intended destination port. Input rate-limiting in conjunction with port flow-control should be used to ensure that the total ingress bandwidth never exceeds the egress bandwidth.

Web – Click PORTS, Port Mirroring.

Port Mirroring
This page enables you to set up the port mirroring features of the switch to enable traffic monitoring.

Ports to Mirror			
Port	Mirroring Enabled	Port	Mirroring Enabled
1	<input checked="" type="checkbox"/>	9	<input type="checkbox"/>
2	<input type="checkbox"/>	10	<input type="checkbox"/>
3	<input type="checkbox"/>	11	<input type="checkbox"/>
4	<input type="checkbox"/>	12	<input type="checkbox"/>
5	<input type="checkbox"/>	13	<input type="checkbox"/>
6	<input type="checkbox"/>	14	<input type="checkbox"/>
7	<input type="checkbox"/>	15	<input type="checkbox"/>
8	<input type="checkbox"/>	16	<input type="checkbox"/>

Port to Mirror to

Port to Mirror to

Figure 5-18 Port Mirroring

Cable Diagnostic

You can perform cable diagnostics for all ports or selected ports to diagnose any cable faults (short, open etc..) and feedback a distance to the fault.

Field Attributes

- **Cable Diagnostics** – Cable diagnostics is performed on a per-port basis. Select the port number from the drop-down list.

- **Cable Status** – Shows the cable length, operating conditions and isolates a variety of common faults that can occur on Category 5 twisted pair cabling.

Web – Click PORTS, Cable Diagnostics.

Cable Diagnostics

Cable diagnostics can be performed for all ports or selected ports. It can be performed from web interface to diagnose any cable faults (Short, Open etc..) and feedback a distance to the fault.

Cable Diagnostics

Port:

APPLY

Cable Status

Pair	Length [m]	Status
A	0	Normal
B	0	Normal
C	0	Normal
D	0	Normal

HELP

Figure 5-19 Cable Diagnostics

Trunks Membership

This page allows you to create a maximum of eight trunks of up to eight ports each. The Membership Table has one row for each port and ten columns. Each row contains nine radio buttons which are used to indicate which trunk (if any) the port belongs to.

Field Attributes

- **Port** – The front panel port number.
- **Not a Trunk Member** – If the radio button in this column is selected, the port is not a member of any trunks. This is the default state.

- **Trunk T1-T8** – These columns correspond to the eight trunks that are supported by the switch. To assign a port to a trunk, click on the radio button in the corresponding column, then click APPLY.

Web – Click TRUNKS, Membership. To assign a port to a trunk, click the required trunk number, then click APPLY.

Membership

This page enables you to configure trunks on the Switch.

Port	Not a Trunk Member	Trunk T1	Trunk T2	Trunk T3	Trunk T4	Trunk T5	Trunk T6	Trunk T7	Trunk T8
1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
5	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
6	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
7	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
8	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
9	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
10	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
11	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
12	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
13	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
14	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
15	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
16	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

HELP

APPLY

CANCEL

Figure 5-20 Trunk Membership

Trunk Configuration

Field Attributes

- **Trunk** – Indicates trunk identification.
- **Speed/Duplex** – Allows you to manually set the port speed and duplex mode for all ports in the trunk.

- **Flow Control** – Allows flow control to be enabled or disabled. When the box is checked, flow control is enabled.
- **Ports** – Indicates which ports belong to the trunk.

Web – Click TRUNKS, Settings.

Trunk Configuration

This page enables you to configure each Trunk configured on the Switch.

Port Configuration			
Trunk	Speed/Duplex	Flow Control	Ports
T1	Auto Speed ▼	<input type="checkbox"/>	2,3

HELP APPLY CANCEL

Figure 5-21 Trunk Configuration

Trunk Rate Limit

This page allows you to change the maximum input and output data rate for each each trunk on the switch.

Field Attributes

- **Trunk** – Indicates trunk identification.
- **Trunk Speed** – Indicates the trunk speed.
- **Enable Input Rate Limiting** - Click to select the box to enable the Input Rate Limiting function.
- **Input Limit** – Enter the desired limit. (percentage of port speed)
- **Enable Output Rate Limiting** – Click to select the box to enable the Output Rate Limiting function.
- **Output Limit** – Enter the desired limit. (percentage of port speed)
- **Ports** – Indicates which ports belong to the trunk.

Web – Click TRUNKS, Rate Limiting.

Rate Limiting
This page enables you to set the rate limiting parameters for each Trunk configured on the Switch.

Trunk	Trunk Speed	Enable Input Rate Limiting	Input Limit (% of port speed)	Enable Output Rate Limiting	Output Limit (% of port speed)	Ports
T1	Auto	<input type="checkbox"/>	<input type="text" value="30"/>	<input type="checkbox"/>	<input type="text" value="30"/>	2,3

Figure 5-22 Trunk Rate Limiting

VLAN Settings

This page allows you to create and delete VLANs (Virtual LANs) and to change the VLAN membership and behaviour of individual ports. VLANs are powerful, but can be difficult to set up properly. Each row of the table corresponds to one port or trunk; trunked ports cannot be configured individually.

Introduction to VLANs

VLANs are logical partitions of the physical LAN. You can use VLANs to increase network performance or improve internal network security.

If the network has adequate performance and security for your current needs, it is recommended that you leave the VLAN settings in the default configuration. The default configuration is as follows:

- All ports are members of VLAN 1
- The switch management interface is on VLAN 1 (this cannot be changed)
- All ports have a Port VLAN ID (PVID) of 1
- All ports can send and receive both VLAN-tagged and untagged packets (that is, they are hybrid ports)

In the default configuration, any port is able to send traffic to any other port and a PC connected to any port will be able to access the management interface. Broadcast traffic, for example, will be flooded to all ports on the switch.

There are three different parameters that can be configured for each port on the switch; VLAN ID (VLAN membership), PVID and Packet Type. Note that the ports within a trunk cannot be configured individually; configure the trunk instead (trunks are labelled T1 to T8).

IEEE 802.1Q Tunneling (QinQ) is designed for service providers carrying traffic for multiple customers across their networks. QinQ tunneling is used to maintain customer-specific VLAN configurations even when different customers use the same internal VLAN IDs. This is accomplished by inserting Service Provider VLAN (SPVLAN) tags into the customer's frames when they enter the service provider's network, and then stripping the tags when the frames leave the network. QinQ tunneling expands VLAN space by using this VLAN-in-VLAN hierarchy, preserving the customer's original tagged packets, and adding SPVLAN tags to each frame (also called double tagging). Ports on the switch can be set to support QinQ when providing a direct link to a service provider's network.

Field Attributes

- **Port/Trunk** – The port-number of the port or the ID of a trunk. This cannot be changed.
- **VLAN Awareness** – VLAN aware ports will strip the VLAN tag from received frames and insert the tag in transmitted frames (except PVID). VLAN unaware ports will not strip the tag from received frames or insert the tag in transmitted frames.
For QinQ operation, a customer port should be set to VLAN unaware and a provider port (trunk port) should be set to VLAN aware.
- **QinQ** – A QinQ enabled port will accept packets up to 1526 bytes in length, which means double tag header frames can be accepted. QinQ should be enabled for provider ports but not for customer ports.

Note: QinQ “customer” ports are those ports that are connected to normal VLAN aware switches in the customer’s network. QinQ “network” ports are those which are connected to the service provider’s network. To tunnel packets through a service provider’s metro network, QinQ needs to be enabled on the network port.

- **Packet Type** – Sets the interface to accept all frame types, including tagged or untagged frames, or only tagged frames. When set to receive all frame types, any received frames that are untagged are assigned to the default VLAN. PCs should be connected to ports with Packet Type set to “All.” PCs cannot, in general, send or receive tagged packets. Switches should be connected to each other with Packet Type set to “Tagged.” If the Packet Type is set to “All,” the port can accept incoming tagged and untagged packets. Untagged packets will be associated with the VLAN identified by the PVID. Tagged packets will be dropped unless the port is a member of the VLAN identified by the VLAN tag in the packet. Outgoing packets will be tagged unless the packet’s VLAN ID is the same as the PVID. If the Packet Type is set to “Tagged,” the port will drop untagged packets and will only send and receive tagged packets. Tagged packets will be dropped unless the port is a member of the VLAN identified by the VLAN tag in the packet. The PVID has no effect in this case.(Option: All, Tagged; Default: All)
- **PVID** – VLAN ID assigned to untagged frames received on the interface. The PVID (Port VLAN ID) is the VLAN ID that is associated with untagged, ingress packets. It is not possible to remove a port from VLAN 1 unless its PVID has been changed to something other than 1. The PVID has no effect on ports that have Packet Type set to Tagged. (Default: 1)

Web – Click VLANS, VLAN Port Configuration. Fill in the required settings for each interface, click Apply.

802.1Q Per Port Configuration

This page allows you to config the VLAN settings per port.

VLAN Per Port Configuration					
Port/ Trunk	VLAN aware Enabled	QinQ Enabled	Packet Type	PVID	
P1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P5	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P6	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P7	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P9	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P10	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P11	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P12	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P13	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>
P14	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	<input type="radio"/> None	<input type="text" value="1"/>

Figure 5-23 VLAN Settings

QOS Settings

QoS (Quality of Service) is a mechanism that is used to prioritize certain traffic as it is forward through the switch. Traffic can be classified as High or Normal priority and, when the switch is heavily loaded, it is the Normal priority packets that are dropped first. You can select how traffic is prioritized by using one of the four QoS modes, which are selected using the QoS Mode drop-down list.

Note: Only one QoS mode can be active at one time. It is not possible, for example, to prioritize traffic using the DSCP value and 802.1p tag.

QoS Disabled

QoS is turned off and all packets have equal priority.

802.1p

Packets are prioritized using the content of the VLAN-tag. The 802.1p field is held within the VLAN-tag of a packet. The field is three bits long so can hold eight values; 0 - 7 inclusive. When QoS Mode is set to 802.1p, the 802.1p Configuration table appears which allows a priority (normal or high) to be set for each of the eight values.

You can use the Prioritize Traffic drop-down list to quickly set the values in the 802.1p Configuration table. Select All Normal Priority to set all values to normal priority or select All High Priority to set all values to high priority. Use Custom if you want to set each value individually.

Note: Because end-stations, like PCs, are not usually VLAN aware, they do not create VLAN-tagged frames. As a result, this method of prioritization is not ideal when there are a lot of PCs connected to the switch.

DSCP

Packets are prioritized using the DSCP (Differentiated Services Code Point) value.

The Differentiated Services Code Point (DSCP) is a six-bit field that is contained within an IP (TCP or UDP) header. The six bits allow the DSCP field to take any value in the range 0 - 63 inclusive. When QoS Mode is set to DSCP, the DSCP Configuration table is displayed, which allows a priority (normal or high) to be set for each of the DSCP values.

You can use the Prioritize Traffic drop-down list to quickly set the values in the DSCP Configuration table. Select All Normal Priority to set all values to normal priority or select All High Priority to set all values to high priority. Use Custom if you want to set each value individually.

Web – Click QOS, Settings. In QoS Mode, select QoS Disabled, 802.1p, or DSCP to configure the related parameters.

QoS Settings

Use Quality of Service (QoS) to set the priority of packets within the switch. High priority packets will have precedence over normal priority packets so, when the switch is congested, fewer high priority packets will be dropped.

QoS Configuration	
Queue Mode	<input checked="" type="radio"/> Strict <input type="radio"/> WRR <small>Note : WRR is not supported in Jumbo Frame mode.</small>
QoS Mode	<div> <div>QoS Disabled ▼</div> <div> QoS Disabled 802.1p DSCP </div> </div> <div> HELP APPLY CANCEL </div>

Figure 5-24 QoS Settings

Security

IP Filter

On this page, you can set up a source IP Filter on all or some ports. It is used to block unwanted access and provide access to the network for either a specific source IP address or a specific subnet. The IP Filter Configuration table has one row for each port and five columns.

Field Attributes

- **Port** - The front-panel port-number of the port. This cannot be changed.
- **Mode** - Select the IP filter mode for this port.
 - **Disabled** - Disable the source IP filter.

- **Static** - Enable the IP filter with configured values in the Address and IP Mask fields.
- **DHCP** - The IP address for the device connected to this port will be automatically assigned by DHCP server and only frames with the assigned IP address are allowed to access the network. The IP Address and IP Mask fields will be filled with the assigned IP address and 255.255.255.255 individually by software.
- **IP Address** - Set up IP addresses to allow access. Frames with IP address outside the allowed range will be dropped.
- **IP Mask** - Sets an IP mask to allow access for a specific subnet. To allow frames with a specific IP address, set the mask to 255.255.255.255.
- **DHCP Server Allowed** - Enables or disables access to a DHCP server on a port. When DHCP Server Allowed is selected on a port, the port is allowed to be linked to a DHCP server. This can prevent the access of unwanted or unsolicited DHCP servers.

Web – Click Security, IP Filter.

IP Filter Configuration

This page enables you to setup the configuration of IP Filter on all or some ports.

Port	Source IP Filter			DHCP Server Allowed
	Mode	IP Address	IP Mask	
1	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
2	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
3	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
4	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
5	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
6	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
7	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
8	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
9	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
10	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
11	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
12	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>
13	Disabled ▾	<input type="text"/>	<input type="text"/>	<input checked="" type="checkbox"/>

Figure 5-25 IP Filter Configuration

Port Security

Port security is a feature that allows you to configure a port with one or more MAC addresses that are authorized to access the network through that port. The Port Security table has one row for each port and five columns.

When port security is enabled on a port, the switch stops learning new MAC addresses on the specified port when it has reached a configured maximum number. Only incoming traffic with source addresses already stored in the dynamic or static address table will be accepted as authorized to access the network through that port. If a device with an unauthorized MAC address attempts to use the switch port, the intrusion will be detected and the switch can automatically take action as specified by Intrusion Action.

Field Attributes

- **Port** - The front-panel port-number of the port. This cannot be changed.
- **Allowed number of Learned MAC addresses** - Set the maximum of MAC addresses that can be learned by this port. The Mode settings for the port are set by a single drop-down list.
 - **No Limit** - No limitation on the number of dynamically learned MAC address. This means port security is disabled.
 - **8/7/6/5/4/3/2/1** - The maximum number of dynamically learned MAC address.
 - **0** - No dynamically learned MAC address is allowed on this port. This does not affect any static MAC addresses that are configured for the port.

Note: Port security only handles dynamically learned MAC addresses and has no limitations on static MAC addresses. On this switch, 24 static MAC address can be configured by System > Static MAC.

- The MAC addresses already in the address table will be retained and will not age out. Any other device that attempts to use the port will be prevented from accessing the switch.
- **Number of Learned MAC addresses** - Displays the number of currently learned MAC addresses. The string ‘-’ is displayed if a port is set with “No Limit” mode in the Allowed number of Learned MAC addresses field.
- **Intrusion Action** - Action to be carried out if unauthorized MAC addresses are detected.
 - **Deny New Stations** - The station with unauthorized MAC address will be denied to access the port.
 - **Send Trap and Deny New Stations** - Besides denying the new station, a trap message is sent by the switch to report an intrusion action.
- **Trunk** - Display the trunk ID if the port is member of a trunk group.

Web – Click Security, Port Security.

Port Security

This page enables you to set the security policy for each port on the Switch.

Rate Limiting				
Port	Allowed number of Learned MAC addresses	Number of Learned MAC addresses	Intrusion Action	Trunk
1	No Limit	-	Deny New Stations	
2	No Limit	-	Deny New Stations	
3	No Limit	-	Deny New Stations	
4	No Limit	-	Deny New Stations	
5	No Limit	-	Deny New Stations	
6	No Limit	-	Deny New Stations	
7	No Limit	-	Deny New Stations	
8	No Limit	-	Deny New Stations	
9	No Limit	-	Deny New Stations	
10	No Limit	-	Deny New Stations	
11	No Limit	-	Deny New Stations	
12	No Limit	-	Deny New Stations	

Figure 5-26 Port Security

ACL

This page enables you to set up a management access filter on the switch. With the Management Access Filter Configuration table, you can create a list of up to 8 IP addresses or IP address groups that are allowed management access to the switch through the web interface or SNMP. The management interfaces are open to all IP addresses by default. Once you add an entry to a filter list, access to that interface is restricted to the specified addresses. If anyone tries to access a management interface on the switch from an invalid address, the switch will reject the connection.

Note: Invalid frames will not be able to access management interface, but normal forwarding is not impacted.

Web – Click Security, ACL.

Management Access Filter Configuration
 This page enables you to configure each Switch port.

Index	ACL Start IP Address	ACL End IP Address
1	<input type="text"/>	<input type="text"/>
2	<input type="text"/>	<input type="text"/>
3	<input type="text"/>	<input type="text"/>
4	<input type="text"/>	<input type="text"/>
5	<input type="text"/>	<input type="text"/>
6	<input type="text"/>	<input type="text"/>
7	<input type="text"/>	<input type="text"/>
8	<input type="text"/>	<input type="text"/>

Figure 5-27 Management Access Filter Configuration

IGMP Snoop

The switch can use Internet Group Management Protocol (IGMP) to filter multicast traffic. IGMP Snooping monitors IGMP service requests passing between multicast clients and servers, and dynamically configures the ports which need to receive the multicast traffic.

Note: For IGMPV3, the switch includes basic support for reports only, Source Multicast is not supported.

Settings

Field Attributes

IGMP Snooping Configuration

- **IGMP Enabled** - When enabled, the switch will monitor network traffic to determine which hosts want to receive multicast traffic.
- **Router Ports** - Set if ports are connecting to the IGMP administrative routers.
- **Unregistered IPMC Flooding enabled** - Set the forwarding mode for unregistered (not-joined) IP multicast traffic. The traffic will flood when enabled, and forward to router-ports only when disabled.

IGMP Snooping VLAN Configuration

- **VLAN ID** - The VLAN ID. This cannot be changed.
- **IGMP Snooping Enabled** - When enabled, the port will monitor network traffic to determine which hosts want to receive the multicast traffic.
- **IGMP Querying Enabled** - When enabled, the port can serve as the Querier, which is responsible for asking hosts if they want to receive multicast traffic.

Web – Click IGMP Snoop, Settings.

IGMP Snooping Configuration
This page enables you to setup the configuration of IGMP Snooping.

IGMP Snooping Information																																
IGMP Enabled	<input type="checkbox"/>																															
Router Ports	1	<input type="checkbox"/>	2	<input type="checkbox"/>	3	<input type="checkbox"/>	4	<input type="checkbox"/>	5	<input type="checkbox"/>	6	<input type="checkbox"/>	7	<input type="checkbox"/>	8	<input type="checkbox"/>	9	<input type="checkbox"/>	10	<input type="checkbox"/>	11	<input type="checkbox"/>	12	<input type="checkbox"/>	13	<input type="checkbox"/>	14	<input type="checkbox"/>	15	<input type="checkbox"/>	16	<input type="checkbox"/>
	17	<input type="checkbox"/>	18	<input type="checkbox"/>	19	<input type="checkbox"/>	20	<input type="checkbox"/>	21	<input type="checkbox"/>	22	<input type="checkbox"/>	23	<input type="checkbox"/>	24	<input type="checkbox"/>																
Unregistered IP/MC Flooding enabled	<input checked="" type="checkbox"/>																															

VLAN ID	IGMP Snooping Enabled	IGMP Querying Enabled
1	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Figure 5-28 IGMP Snooping Configuration

IGMP Status

Show the IGMP Snooping statistics for the whole switch

Field Attributes

- **VLAN ID** - VLAN ID number.
- **Querier** - Show whether Querying is enabled.
- **Queries transmitted** - Show the number of transmitted Query packets.
- **Queries received** - Show the number of received Query packets.
- **v1 Reports** - Show the number of received v1 Report packets.
- **v2 Reports** - Show the number of received v2 Report packets.
- **v3 Reports** - Show the number of received v2 Report packets.
- **v3 Leave** - Show the number of v3 leave packets received.

Web – Click IGMP Snoop, Status.

IGMP Snooping Configuration

This page displays the status of IGMP Snooping.

IGMP Snooping Information							
VLAN ID	Querier	Queries transmitted	Queries received	v1 Reports	v2 Reports	v3 Reports	v2 Leaves
1	Disabled	0	0	0	0	0	0

[HELP](#) [REFRESH](#)

Figure 5-29 IGMP Snoop Status

APPENDIX A

TROUBLESHOOTING

Diagnosing Switch Indicators

Table A-1 Troubleshooting Chart

Symptom	Action
Power LED is Off	<ul style="list-style-type: none">• Check connections between the switch, the power cord, and the wall outlet.• Contact your dealer for assistance.• Contact SMC Technical Support.
Link LED is Off	<ul style="list-style-type: none">• Verify that the switch and attached device are powered on.• Be sure the cable is plugged into both the switch and corresponding device.• If the switch is installed in a rack, check the connections to the punch-down block and patch panel.• Verify that the proper cable type is used and its length does not exceed specified limits.• Check the adapter on the attached device and cable connections for possible defects. Replace the defective adapter or cable if necessary.

Power and Cooling Problems

If the power indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply. However, if the unit powers off after running for a while, check for loose power connections, power losses or surges at the power outlet, and verify that the fans on the unit are unobstructed and running prior to shutdown. If you still cannot isolate the problem, then the internal power supply may be defective.

Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (such as the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are functioning properly.

In-Band Access

You can access the management agent in the switch from anywhere within the attached network using a Web browser, or other network management software tools. However, you must first configure the switch with a valid IP address, subnet mask, and default gateway. If you have trouble establishing a link to the management agent, check to see if you have a valid network connection. Then verify that you entered the correct IP address. Also, be sure the port through which you are connecting to the switch has not been disabled. If it has not been disabled, then check the network cabling that runs between your remote location and the switch.

APPENDIX B

CABLES

Twisted-Pair Cable and Pin Assignments

For 10BASE-T/100BASE-TX connections, a twisted-pair cable must have two pairs of wires. For 1000BASE-T connections the twisted-pair cable must have four pairs of wires. Each wire pair is identified by two different colors. For example, one wire might be green and the other, green with white stripes. Also, an RJ-45 connector must be attached to both ends of the cable.

Caution: Each wire pair must be attached to the RJ-45 connectors in a specific orientation.

Caution: DO NOT plug a phone jack connector into any RJ-45 port. Use only twisted-pair cables with RJ-45 connectors that conform with FCC standards.

Figure B-1 illustrates how the pins on the RJ-45 connector are numbered. Be sure to hold the connectors in the same orientation when attaching the wires to the pins.

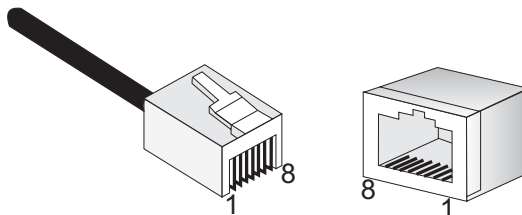


Figure B-1 RJ-45 Connector Pin Numbers

10BASE-T/100BASE-TX Pin Assignments

Use unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable for RJ-45 connections: 100-ohm Category 3 or better cable for 10 Mbps connections, or 100-ohm Category 5 or better cable for 100 Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).

The RJ-45 ports on the switch base unit support automatic MDI/MDI-X operation, so you can use straight-through cables for all network connections to PCs or servers, or to other switches or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3, and 6 at the other end of the cable. When using any RJ-45 port on the switch, you can use either straight-through or crossover cable.

Table B-1 10/100BASE-TX MDI and MDI-X Port Pinouts

Pin	MDI Signal Name	MDI-X Signal Name
1	Transmit Data plus (TD+)	Receive Data plus (RD+)
2	Transmit Data minus (TD-)	Receive Data minus (RD-)
3	Receive Data plus (RD+)	Transmit Data plus (TD+)
6	Receive Data minus (RD-)	Transmit Data minus (TD-)
4,5,7,8	Not used	Not used

Note: The “+” and “-” signs represent the polarity of the wires that make up each wire pair.

Straight-Through Wiring

If the twisted-pair cable is to join two ports and only one of the ports has an internal crossover (MDI-X), the two pairs of wires must be straight-through. (When auto-negotiation is enabled for any RJ-45 port on the switch, you can use either straight-through or crossover cable to connect to any device type.)

You must connect all four wire pairs as shown in the following diagram to support Gigabit Ethernet connections.

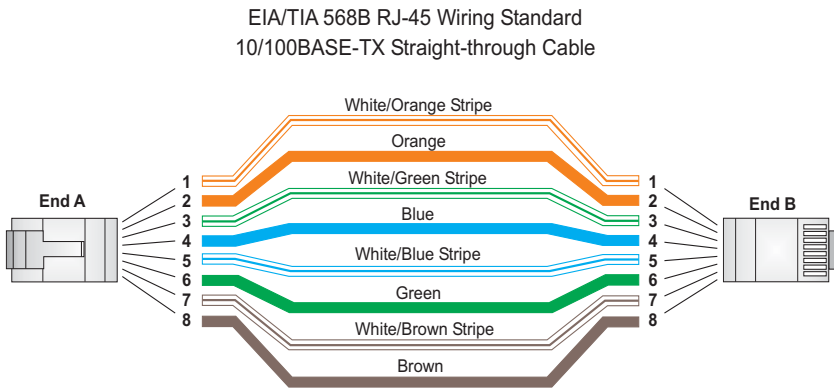


Figure B-2 Straight-through Wiring

Crossover Wiring

If the twisted-pair cable is to join two ports and either both ports are labeled with an “X” (indicating MDI-X) or neither port is labeled with an “X” (which indicates MDI), a crossover must be implemented in the wiring. (When auto-negotiation is enabled for any RJ-45 port on the switch, you can use either straight-through or crossover cable to connect to any device type.)

You must connect all four wire pairs as shown in the following diagram to support Gigabit Ethernet connections.

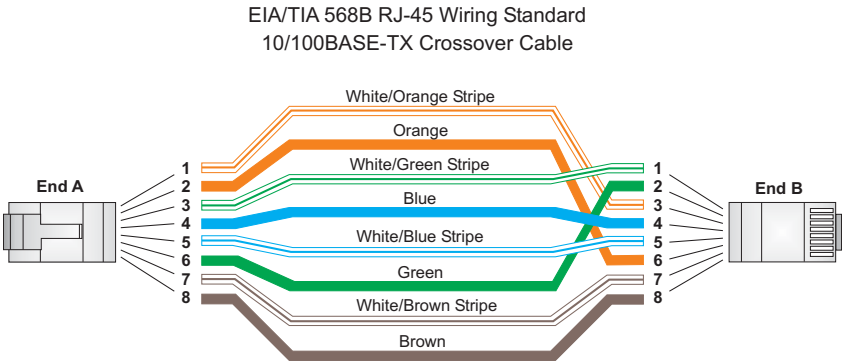


Figure B-3 Crossover Wiring

1000BASE-T Pin Assignments

All 1000BASE-T ports support automatic MDI/MDI-X operation, so you can use straight-through cables for all network connections to PCs or servers, or to other switches or hubs.

The table below shows the 1000BASE-T MDI and MDI-X port pinouts. These ports require that all four pairs of wires be connected. Note that for 1000BASE-T operation, all four pairs of wires are used for both transmit and receive.

Use 100-ohm Category 5, 5e or 6 unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable for 1000BASE-T connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).

Table B-2 1000BASE-T MDI and MDI-X Port Pinouts

Pin	MDI Signal Name	MDI-X Signal Name
1	Bi-directional Data One Plus (BI_D1+)	Bi-directional Data Two Plus (BI_D2+)
2	Bi-directional Data One Minus (BI_D1-)	Bi-directional Data Two Minus (BI_D2-)
3	Bi-directional Data Two Plus (BI_D2+)	Bi-directional Data One Plus (BI_D1+)
4	Bi-directional Data Three Plus (BI_D3+)	Bi-directional Data Four Plus (BI_D4+)
5	Bi-directional Data Three Minus (BI_D3-)	Bi-directional Data Four Minus (BI_D4-)
6	Bi-directional Data Two Minus (BI_D2-)	Bi-directional Data One Minus (BI_D1-)
7	Bi-directional Data Four Plus (BI_D4+)	Bi-directional Data Three Plus (BI_D3+)
8	Bi-directional Data Four Minus (BI_D4-)	Bi-directional Data Three Minus (BI_D3-)

Cable Testing for Existing Category 5 Cable

Installed Category 5 cabling must pass tests for Attenuation, Near-End Crosstalk (NEXT), and Far-End Crosstalk (FEXT). This cable testing information is specified in the ANSI/TIA/EIA-TSB-67 standard.

Additionally, cables must also pass test parameters for Return Loss and Equal-Level Far-End Crosstalk (ELFEXT). These tests are specified in the ANSI/TIA/EIA-TSB-95 Bulletin, "The Additional Transmission Performance Guidelines for 100 Ohm 4-Pair Category 5 Cabling."

Note that when testing your cable installation, be sure to include all patch cables between switches and end devices.

Adjusting Existing Category 5 Cabling to Run 1000BASE-T

If your existing Category 5 installation does not meet one of the test parameters for 1000BASE-T, there are basically three measures that can be applied to try and correct the problem:

1. Replace any Category 5 patch cables with high-performance Category 5e or Category 6 cables.
2. Reduce the number of connectors used in the link.
3. Reconnect some of the connectors in the link.

Fiber Standards

The current TIA (Telecommunications Industry Association) 568-A specification on optical fiber cabling consists of one recognized cable type for horizontal subsystems and two cable types for backbone subsystems.

Horizontal 62.5/125 micron multimode (two fibers per outlet).

Backbone 62.5/125 micron multimode or single mode.

TIA 568-B will allow the use of 50/125 micron multimode optical fiber in both the horizontal and backbone in addition to the types listed above. All optical fiber components and installation practices must meet applicable building and safety codes.

APPENDIX C

SPECIFICATIONS

Physical Characteristics

Ports

20 10/100/1000BASE-T, with auto-negotiation

4 10/100/1000BASE-T shared with 4 SFP transceiver slots.

Network Interface

Ports 1-24: RJ-45 connector, auto MDI/X

10BASE-T: RJ-45 (100-ohm, UTP cable; Category 3 or better)

100BASE-TX: RJ-45 (100-ohm, UTP cable; Category 5 or better)

1000BASE-T: RJ-45 (100-ohm, UTP or STP cable; Category 5, 5e, or 6)

*Maximum Cable Length - 100 m (328 ft)

Buffer Architecture

400 Kbytes

Aggregate Bandwidth

48 Gbps

Switching Database

8K MAC address entries, 1K static MAC addresses;

LEDs

System: Power

Port: Link/Act, 1000

Weight

3.72 kg (8.44 lbs)

SPECIFICATIONS

Size

44.0 x 17.1 x 4.3 cm (17.0 x 6.7 x 1.7 in.)

Temperature

Operating: 0 to 40 °C (32 to 104 °F)

Storage: -40 to 70 °C (-40 to 158 °F)

Humidity

Operating: 10% to 90% (non-condensing)

AC Input

100 to 240 V, 50-60 Hz, 0.8 A

Power Supply

Internal, auto-ranging transformer: 100 to 240 VAC, 50 to 60 Hz

Power Consumption

28 Watts

Maximum Current

0.25 A @ 115 VAC

0.12 A @ 230 VAC

Switch Features

Forwarding Mode

Store-and-forward

Throughput

Wire speed

Management Features

In-Band Management

Web Interface

Software Loading

HTTP in-band

Standards

IEEE 802.3-2005

Ethernet, Fast Ethernet, Gigabit Ethernet

IEEE 802.1Q Virtual LAN

IEEE 802.1X, Port-Based Network Access Control, 2001

ISO/IEC 8802-3

Compliances

CE Mark

Emissions

FCC Class A

VCCI Class A

Immunity

EN 61000-4-2/3/4/5/6/8/11

Safety

UL 60950-1 & CSA 60950-1

IEC 60950-1 & EN 60950-1

Warranty

Limited Lifetime

SPECIFICATIONS

APPENDIX D

ORDERING INFORMATION

Table D-1 EZ Switch 10/100/1000 Products and Accessories

Product Number	Description
SMCGS24C-Smart	24 port 10/100/1000 Smart Switch
SMC1GSFP-SX	1-port 1000BASE-SX Small Form Pluggable (SFP) mini-GBIC transceiver
SMC1GSFP-LX	1-port 1000BASE-LX Small Form Pluggable (SFP) mini-GBIC transceiver
SMC1GSFP-ZX	1-port 1000BASE-ZX Small Form Pluggable (SFP) mini-GBIC transceiver

ORDERING INFORMATION

GLOSSARY

10BASE-T

IEEE 802.3 specification for 10 Mbps Ethernet over two pairs of Category 3 or better UTP cable.

100BASE-TX

IEEE 802.3u specification for 100 Mbps Fast Ethernet over two pairs of Category 5 or better UTP cable.

1000BASE-LX

IEEE 802.3z specification for Gigabit Ethernet over two strands of 50/125, 62.5/125 or 9/125 micron core fiber cable.

1000BASE-SX

IEEE 802.3z specification for Gigabit Ethernet over two strands of 50/125 or 62.5/125 micron core fiber cable.

1000BASE-T

IEEE 802.3ab specification for Gigabit Ethernet over 100-ohm Category 5 or 5e twisted-pair cable (using all four wire pairs).

1000BASE-ZX

Specification for long-haul Gigabit Ethernet over two strands of 9/125 micron core fiber cable.

Auto-Negotiation

Signalling method allowing each node to select its optimum operational mode (e.g., speed and duplex mode) based on the capabilities of the node to which it is connected.

Bandwidth

The difference between the highest and lowest frequencies available for network signals. Also synonymous with wire speed, the actual speed of the data transmission along the cable.

Collision

A condition in which packets transmitted over the cable interfere with each other. Their interference makes both signals unintelligible.

Collision Domain

Single CSMA/CD LAN segment.

CSMA/CD

CSMA/CD (Carrier Sense Multiple Access/Collision Detect) is the communication method employed by Ethernet, Fast Ethernet, or Gigabit Ethernet.

End Station

A workstation, server, or other device that does not forward traffic.

Ethernet

A network communication system developed and standardized by DEC, Intel, and Xerox, using baseband transmission, CSMA/CD access, logical bus topology, and coaxial cable. The successor IEEE 802.3 standard provides for integration into the OSI model and extends the physical layer and media with repeaters and implementations that operate on fiber, thin coax and twisted-pair cable.

Fast Ethernet

A 100 Mbps network communication system based on Ethernet and the CSMA/CD access method.

Full Duplex

Transmission method that allows two network devices to transmit and receive concurrently, effectively doubling the bandwidth of that link.

Gigabit Ethernet

A 1000 Mbps network communication system based on Ethernet and the CSMA/CD access method.

IEEE

Institute of Electrical and Electronic Engineers.

IEEE 802.3

Defines carrier sense multiple access with collision detection (CSMA/CD) access method and physical layer specifications.

IEEE 802.3ab

Defines CSMA/CD access method and physical layer specifications for 1000BASE-T Gigabit Ethernet. (Now incorporated in IEEE 802.3-2005.)

IEEE 802.3u

Defines CSMA/CD access method and physical layer specifications for 100BASE-TX Fast Ethernet. (Now incorporated in IEEE 802.3-2005.)

IEEE 802.3x

Defines Ethernet frame start and stop requests and timers used for flow control on full-duplex links. (Now incorporated in IEEE 802.3-2005.)

IEEE 802.3z

Defines CSMA/CD access method and physical layer specifications for 1000BASE Gigabit Ethernet. (Now incorporated in IEEE 802.3-2005.)

LAN Segment

Separate LAN or collision domain.

Layer 2

Data Link layer in the ISO 7-Layer Data Communications Protocol. This is related directly to the hardware interface for network devices and passes on traffic based on MAC addresses.

LED

Light emitting diode used for monitoring a device or network condition.

Link Segment

Length of twisted-pair or fiber cable joining a pair of repeaters or a repeater and a PC.

Local Area Network (LAN)

A group of interconnected computers and support devices.

Management Information Base (MIB)

An acronym for Management Information Base. It is a set of database objects that contains information about the device.

Media Access Control (MAC)

A portion of the networking protocol that governs access to the transmission medium, facilitating the exchange of data between network nodes.

Modal Bandwidth

Bandwidth for multimode fiber is referred to as modal bandwidth because it varies with the modal field (or core diameter) of the fiber. Modal bandwidth is specified in units of MHz per km, which indicates the amount of bandwidth supported by the fiber for a one km distance.

Network Diameter

Wire distance between two end stations in the same collision domain.

Redundant Power Supply (RPS)

A backup power supply unit that automatically takes over in case the primary power supply should fail.

RJ-45 Connector

A connector for twisted-pair wiring.

Switched Ports

Ports that are on separate collision domains or LAN segments.

TIA

Telecommunications Industry Association

Transmission Control Protocol/Internet Protocol (TCP/IP)

Protocol suite that includes TCP as the primary transport protocol, and IP as the network layer protocol.

UTP

Unshielded twisted-pair cable.

Virtual LAN (VLAN)

A Virtual LAN is a collection of network nodes that share the same collision domain regardless of their physical location or connection point in the network. A VLAN serves as a logical workgroup with no physical barriers, allowing users to share information and resources as though located on the same LAN.

GLOSSARY

INDEX

Numerics

- 10 Mbps connectivity rules 4-7
- 100 Mbps connectivity rules 4-7
- 1000 Mbps connectivity rules 4-6
- 1000BASE-LX fiber cable lengths 4-7
- 1000BASE-SX fiber cable lengths 4-6
- 1000BASE-T
 - pin assignments B-5
 - ports 1-3
- 1000BASE-ZX fiber cable lengths 4-7
- 100BASE-TX
 - cable lengths 4-7
 - ports 1-3
- 10BASE-T ports 1-3
- 10BASE-T/100BASE-TX pin assignments B-2

A

- accessories, ordering D-1
- adhesive feet, attaching 3-6
- air flow requirements 3-1
- applications
 - collapsed backbone 2-2
 - remote connections 2-3
 - VLAN connections 2-3, 2-5

B

- brackets, attaching 3-5
- buffer size C-1

C

- cable
 - Ethernet cable compatibility 3-2
 - labeling and connection records 4-8
 - lengths 4-7

- cleaning fiber terminators 4-4
- compliances
 - EMC C-3
 - safety C-3
- connectivity rules
 - 10 Mbps 4-7
 - 100 Mbps 4-7
 - 1000 Mbps 4-6
- contents of package 3-3
- cooling problems A-2
- cord sets, international 3-8

D

- desktop mounting 3-6
- device connections 4-1

E

- electrical interference, avoiding 3-1
- equipment checklist 3-3
- Ethernet connectivity rules 4-6, 4-7

F

- Fast Ethernet connectivity rules 4-7
- features C-2
 - management 1-6
- full-duplex connectivity 2-1

G

- grounding for racks 3-4

I

- IEEE 802.3 Ethernet 1-5
- IEEE 802.3ae 10 Gigabit Ethernet 1-5
- IEEE 802.3u Fast Ethernet 1-5

INDEX

IEEE 802.3z Gigabit Ethernet 1-5
indicators, LED 1-3
installation
 connecting devices to the switch 4-2
 desktop or shelf mounting 3-6
 port connections 4-1
 power requirements 3-1
 problems A-2
 rack mounting 3-4
 site requirements 3-1
 wiring closet connections 4-7
IP address
 setting 5-13

L

laser safety 4-4
LC port connections 4-4
LED indicators
 Power 1-4
 problems A-1
location requirements 3-1

M

main menu 5-4
management
 agent 1-2
 features 1-6, C-2, C-3
 SNMP 1-2
modules, 10GBASE-LR C-3
mounting the switch
 in a rack 3-4
 on a desktop or shelf 3-6

N

network
 connections 4-1
 examples 2-2

O

ordering information D-1

P

package contents 3-3
passwords
 administrator setting 5-14
pin assignments B-1
 1000BASE-T B-5
 100BASE-TX/10BASE-T B-2
port, statistics 5-9
ports, connecting to 4-1
power, connecting to 3-8
problems, troubleshooting A-1

R

rack mounting 3-4
rate limits, setting 5-21
rear panel receptacles 1-5
RJ-45 port 1-3
 connections 4-1
 pinouts B-5
rubber foot pads, attaching 3-6

S

screws for rack mounting 3-3
site selection 3-1
SNMP agent 1-2
specifications
 compliances C-2, C-3
 environmental C-2
 physical C-1
 power C-2
standards
 compliance C-3
 IEEE C-3

- statistics
 - port 5-9
- status LEDs 1-3
- surge suppressor, using 3-1
- switch architecture 1-2
- switching, introduction to 2-1

T

- temperature within a rack 3-4
- troubleshooting
 - in-band access A-2
 - power and cooling problems A-2
 - switch indicators A-1
- twisted-pair connections 4-1

U

- user password 5-14

V

- VLANs
 - tagging 2-5

W

- Web interface
 - access requirements 5-1
 - configuration buttons 5-3
 - home page 5-2
 - menu list 5-4
 - panel display 5-3

INDEX

TECHNICAL SUPPORT

From U.S.A. and Canada (24 hours a day, 7 days a week)

Phn: 800-SMC-4-YOU / 949-679-8000

Fax: 949-502-3400

ENGLISH

Technical Support information available at www.smc.com

FRENCH

Informations Support Technique sur www.smc.com

DEUTSCH

Technischer Support und weitere Information unter www.smc.com

SPANISH

En www.smc.com Ud. podrá encontrar la información relativa a servicios de soporte técnico

DUTCH

Technische ondersteuningsinformatie beschikbaar op www.smc.com

PORTUGUES

Informações sobre Suporte Técnico em www.smc.com

SWEDISH

Information om Teknisk Support finns tillgängligt på www.smc.com

INTERNET

E-mail address: techsupport@smc.com

Driver updates

<http://www.smc.com/>

[index.cfm?action=tech_support_drivers_downloads](http://www.smc.com/index.cfm?action=tech_support_drivers_downloads)

World Wide Web

<http://www.smc.com/>

SMCGS24C-Smart